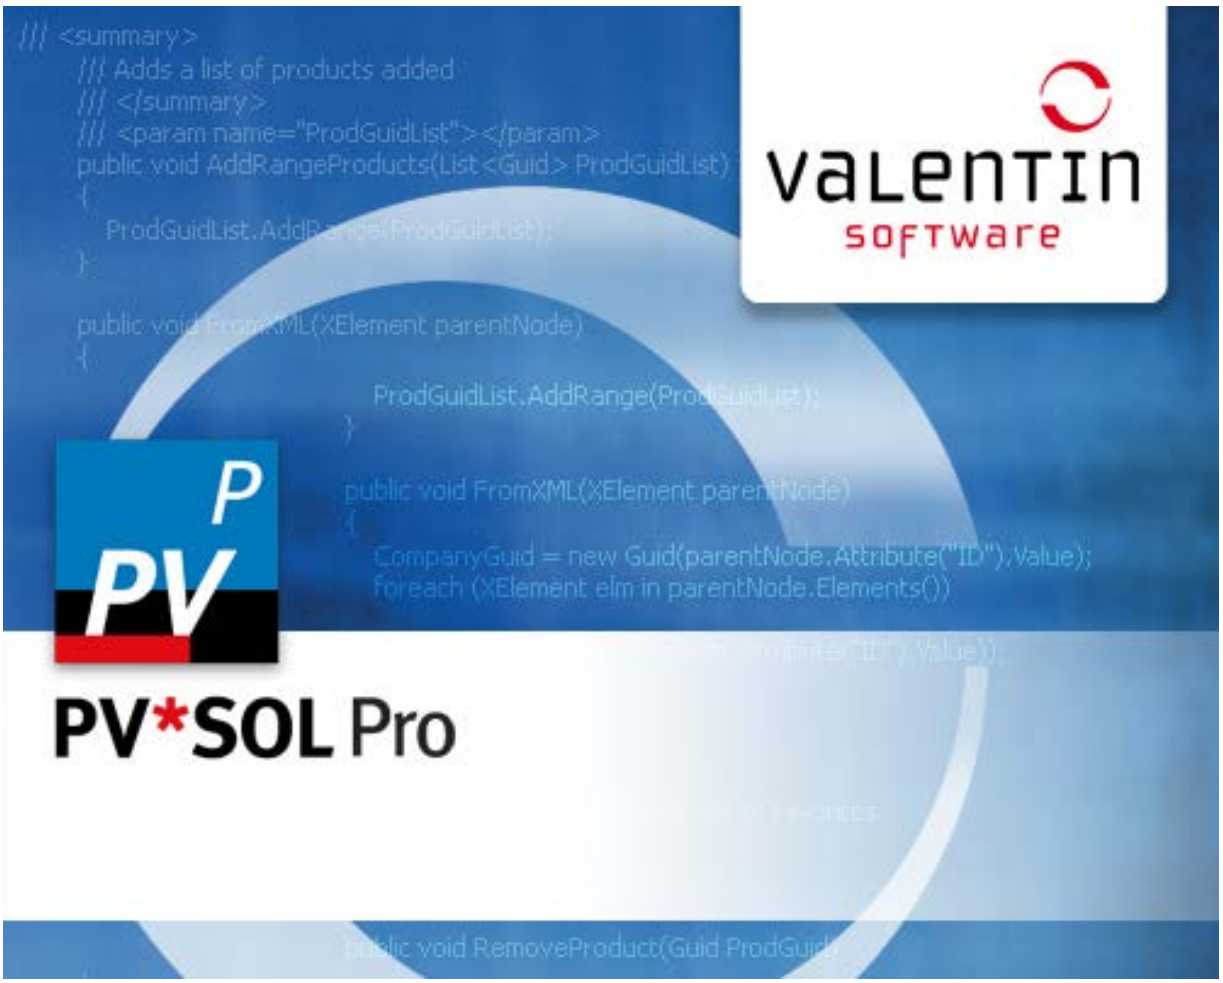

PV*SOL® Pro

Version 5.5

Design and Simulation of Photovoltaic Systems

Manual

Disclaimer

Great care has been taken in compiling the texts and images. Nevertheless, the possibility of errors cannot be completely eliminated. The handbook purely provides a product description and is not to be understood as being of warranted quality under law. The publisher and authors can accept neither legal responsibility nor any liability for incorrect information and its consequences. No responsibility is assumed for the information contained in this handbook.

The software described in this handbook is supplied on the basis of the license agreement which you accept on installing the program.

No liability claims may be derived from this.

Making copies of the handbook is prohibited.

Copyright und Warenzeichen

PV*SOL® is a registered trademark of Dr. Gerhard Valentin.

Windows Vista®, Windows XP®, and Windows 7® are registered trademarks of Microsoft Corp. All program names and designations used in this handbook may also be registered trademarks of their respective manufacturers and may not be used commercially or in any other way. Errors excepted.

Berlin, April 2012

COPYRIGHT © 1993-2012 Dr.-Ing. Gerhard Valentin

Dr. Valentin EnergieSoftware GmbH
Stralauer Platz 34
10243 Berlin
Germany

Tel.: +49 (0)30 588 439 - 15
Fax: +49 (0)30 588 439 - 11
info@valentin.de
www.valentin.de

Management: Dr. Gerhard Valentin
DC Berlin-Charlottenburg, Germany
HRB 84016

Valentin Software, Inc.
31915 Rancho California Rd, #200-285
Temecula, CA 92591
USA

Tel.: +001 951.530.3322
Fax: +001 858.777.5526 fax
info@valentin-software.com
http://valentin-software.com/

Content

1 Program Series PV*SOL 7
1.1 New in PV*SOL Pro Version 5.5 7
2 Software Management 8
2.1 System Requirements 8
2.2 Activation of the Program 8
2.2.1 Serial Number 8
2.2.2 Program ID 8
2.2.3 Requesting an Activation Key Code 8
2.2.4 Enter the Activation Key Code 9
2.2.5 Licensing Terms 9
3 Bases of calculation 9
3.1 Bases of calculation - radiation processor 10
3.2 Bases of calculation - power output of PV module 10
3.3 Bases of calculation - inverter 12
3.4 Bases of calculation - temperature model 13
3.4.1 Linear Temperature Model 13
3.4.2 Dynamic temperature model 13
3.5 Bases of calculation - cabling losses 15
3.6 Bases of calculation - evaluation parameters 15
3.7 Bases of calculation - economic efficiency calculation 16
3.8 Bases of calculation - design recommendation 17
4 PV*SOL® Components 18
5 Quick Guide - Working on Projects 19
6 Operating Instructions & Workflow 20
6.1 User Interface (Menu, Tool Bar, Dialogs) 20
6.1.1 Menu 21
6.1.2 Speed Buttons Bar 21
6.2 Load and Save File 22
6.3 Simulation 23
7 File Menu 24
7.1 New Project 24
7.2 Quick Design 24
7.2.1 Quick Design – Stand-Alone Systems 25
7.2.2 Quick Design – Grid Connected Systems 25
7.3 Project Administration... 26
7.4 Open... 26
7.5 Save or Save As... 26

7.6 Exit 26
8 Conditions Menu 27
8.1 Climate Data Files 27
8.2 Pollutant Mix 27
9 Appliances Menu 28
9.1 Load profile - List of Appliances 28
9.1.1 Load Profile - Appliances via Load Profile 28
9.1.2 Holiday Periods 29
9.2 Defining load profiles 29
9.3 List of Individual Appliances 30
9.4 Define an Appliance 30
9.4.1 Individual Appliances: User-Independent Appliance 32
9.4.2 Individual Appliances: User-Dependent Appliance 32
9.4.3 Individual Appliances: Short-Time Use Appliance 33
9.4.4 Individual Appliance: Light 33
9.4.5 Kilowatt-Hour Price 34
9.4.6 Load Utilisation Period Discount by Table 35
9.4.7 Power Measurement 35
9.4.8 Discounts 36
9.4.9 Heavy Load Periods 37
9.4.10 Discounts/Supplements 38
9.4.11 Tariffs 38
9.4.12 Tariff Time Periods 38
9.4.13 Supplements 38
10 System Menu 40
10.1 Technical Data 40
10.1.1 Technical Data – Stand-Alone 41
10.1.2 Technical Data – Grid Connected 43
10.1.3 Roof Parameters 45
10.1.4 Workflow 54
10.1.5 Photo Plan 55
10.1.6 Orientation 56
10.1.7 Installation Type 57
10.1.8 Losses 57
10.1.9 System Diagram 58
10.2 Shade 58
10.2.1 Coordinates Table 59
10.2.2 New Sketch 59
10.2.3 Shade Caused by Individual Objects 59

11 Calculations Menu 61
11.1 Quick Design 61
11.2 Simulation 61
11.3 Economic Efficiency Calculation 62
11.3.1 Economic Efficiency Calculation – Grid Connected Systems 62
11.3.2 Economic Efficiency Calculation – Stand-Alone Systems 71
11.3.3 Payback Period 72
11.3.4 Net Present Value 72
11.3.5 Economic Efficiency Calculation - Other Proceeds/Savings 73
11.3.6 Electricity Production Costs 73
11.3.7 Results Overview 73
12 Results Menu 75
12.1 Annual Energy Balance 75
12.2 Energy & Climate Data - Graphics 75
12.2.1 Formatting of Graphs 76
12.2.2 Formatting the X-Axis 76
12.2.3 Formatting the Y-Axis 76
12.2.4 Printing Graphics 77
12.2.5 Graphics in Table Format 77
12.2.6 Graphics Screen Speed Buttons 77
12.3 Payment Received for Grid Supply 78
12.4 Grid Electricity Costs 78
12.5 Pollutant Emissions 79
12.6 Project Report 79
12.6.1 Detailed Project Report 79
12.6.2 Print dialog 80
12.6.3 View Page Layout 80
12.6.4 Summary Project Report 81
12.7 Variant Comparison Selection 81
12.7.1 Variant Comparison 82
13 Database Menu 83
13.1 PV Module 83
13.1.1 Worksheet 1 – Basic Data: 83
13.1.2 Worksheet 2 - U/I Characteristics under STC: 83
13.1.3 Worksheet 3 - U/I Characteristics under Part Load Conditions: 84
13.1.4 Worksheet 4 – Other Characteristics: 85
13.2 Module Part Load Operation 85
13.3 Inverter – Grid Connected Systems 86
13.4 Inverter – Stand-Alone Systems 88
13.5 Inverter Characteristic Curve dialog 88

13.6 Battery (not available with PV*SOL®-N) 89
13.7 MPP Tracker (not available with PV*SOL®-N) 89
13.8 Load Profile 90
13.9 Individual Appliances 91
13.10 From Grid Tariff 91
13.11 To Grid Tariff 92
13.12 Pollutants 93
13.13 Loans 93
14 Options Menu 95
14.1 Paths... 95
14.2 Settings 95
14.2.1 System Check 97
14.2.2 Database Monitoring System 100
14.2.3 Message: ... Database file 101
15 Language Menu 102
16 Help Menu 103
17 Glossary 104
18 Index 108

1 Program Series PV*SOL

The PV*SOL series supports the planner in the design of photovoltaic systems by dynamic simulation and yield calculation:

PV*SOL basic

- grid connected photovoltaic systems

PV*SOL Pro

- grid connected photovoltaic systems using full feed-in or net metering
- off-grid systems (Net Metering)

PV*SOL Expert

- grid connected photovoltaic systems using full feed-in or net metering
- off-grid systems (Net Metering)
- 3D-visualization:
  - Module covering
  - Module mounting
  - Module wiring
  - with detailed shading analysis

1.1 New in PV*SOL Pro Version 5.5

- Imperial units
- Entries of losses in one array can be adopted to all other PV arrays
- SAP 2012 climate data are now available for UK
- UNI 10249 climate data are now available for Italy
- New German climate data for 1981-2010

➔ **See also:** http://www.valentin.de/en/products/photovoltaics

2 Software Management

2.1 System Requirements

	PV*SOL Pro	PV*SOL Expert
Internet access		
Processor:	1,5 GHz Pentium PC	2,5 GHz Pentium PC
Memory:	1024 MB	2048 MB
Hard disk drive:	700 MB	
Monitor resolution:	min. 1.024 x 768 Pixel	
Operating system:	Windows XP Service Pack 3, Windows Vista, Windows 7	
Graphics:	3D, DirectX– kompatibel, 128 E: 256 MB, OpenGL, Version 1.1 (needed for Photoplan)	
Software:	**DirectX,** Version 9.0c; .net-Framework, Version 2.0 SP1	

To run the program, you must have read and write rights to the PV*SOL® program directory.

PV*SOL®adopts the formats for currency, numbers, time and date set in the country settings of Windows' control panel.
These formats also appear on print-outs. It is important for the operation of the program that separators for thousands and decimals are different.

2.2 Activation of the Program

2.2.1 Serial Number

If you have purchased the program, you will have a serial number.
This is made up of a combination of 38 digits and letters, which you will have to enter without any spaces in between, but including the special characters (hyphens).

You will find the serial number either on the CD case or on the invoice. Alternatively, if you made your purchase online, you will have been notified by e-mail.

2.2.2 Program ID

The program ID is allocated specifically for your computer and is only valid for use on your computer. A valid serial number, issued on purchase of the program, is required to obtain an ID.

The program ID is automatically provided as soon as you enter the serial number.

It is not possible to enter the program ID yourself.

You will need to let us know the program ID when registering, so that we can send you your key code.

2.2.3 Requesting an Activation Key Code

You can activate your program in two different ways.

Request a Key Code Online

This method requires that your computer has internet access.
Click on the *Online* button to open a form, where you can enter all the information required to receive a key code. The fields marked with an * must be completed.
After you have completed the form, you can send it straight off – the recipient's e-mail address is entered automatically for your convenience. After sending the e-mail, you will receive your key code, which will be sent to the e-mail address you have entered, in approximately 20 minutes.

Request a Key Code by Telephone

If you do not have a fax or e-mail, you can request the key code by phone. In this case, you will need to give us your program ID when you call.

2.2.4 Enter the Activation Key Code

Once you have completed registration, you will receive your key code within the following period:

Approx. 20 minutes after online registration

You can close the program in the meantime. When you go back into the program to continue registration, the entries you have made so far have been saved.

Once you have received the key code following Registration, enter the key code into the key code input field.

Click the *OK* button. You will receive a message, confirming that your program has been activated.

You can now start working with the full program without having to start up again.

We are pleased to support your work and wish you every success!

2.2.5 Licensing Terms

How many times can the program be installed?
The number of permissible installations corresponds to the number of licenses you have purchased. If, for example, you have purchased a single-user license, you may install the program on one workstation.

In addition, you can activate the program on a second computer, e.g. a laptop. However, this is only possible on the condition that the two installations are not used simultaneously.

3 Bases of calculation

This chapter contains information on the bases of calculation for the following topic areas:

- Radiation processor
- Power output of the PV module
- Inverter
- Linear temperature model
- Dynamic temperature model
- Output losses
- Evaluation parameters
- Economic efficiency calculation
- Design recommendation

3.1 Bases of calculation - radiation processor

In the supplied climate files, radiation to the horizontal plane is given in watts per square meter of active solar surface (radiation to the horizontal plane). The program converts this to the tilted surface during the simulation in the radiation processor and multiplies it by the total active solar surface. Possible shading reduces the irradiation.

The radiation processor must split the radiation into diffuse and direct radiation. The splitting is carried out according to Reindl's radiation model with reduced correlation. [Reindl, D.T.; Beckmann, W. A.; Duffie, J.A. : Diffuse fraction correlations; Solar Energy; Vol. 45; No. 1, p.1.7; Pergamon Press; 1990]

When converting the irradiation onto the tilted surface, the anisotropic sky model by Hay and Davis is used. [Duffie,J.A.; Beckmann, W.A.: Solar engineering of thermal process; John Wiley & Sons, USA; second editions; 1991] This model takes into account an anisotropy factor for circumsolar radiation and the ground reflection factor entered in the program (Albedo).

To convert the direct share of solar radiation in relation to the PV array, taking into account the active solar surface from the direct solar radiation to the horizontal plane, the position of the sun relative to the PV area must be calculated from the height of the sun, solar azimuth, PV array tilt angle and PV array azimuth. The height of the sun and the solar azimuth are determined on the basis of the date, time and latitude. The tilt angle and azimuth of the PV array are entered in the program.

The radiation without shading results from the direct and diffuse share together.

The radiation to tilted PV array surfaces takes into account possible shading of the array. The shading is also split into diffuse and direct radiation. The diffuse share is determined proportionally to the shaded area independent of the height of the sun and the solar azimuth. The direct irradiation to the PV area is reduced by the duration of shading in each calculation step.

The radiation to tilted PV array surfaces is reflected at the module surface. The direct radiation share is reflected depending on the position of the sun and the incident angle modifier of the module. The incident angle modifier for diffuse radiation is set in the program. The resulting radiation is the radiation minus reflection.

3.2 Bases of calculation - power output of PV module

By specifying the module voltage, the power output of the PV module can be determined from the irradiation to the tilted PV array surface (without reflection losses) and the calculated module temperature.

Image 1 shows the module output of a typical 100 W module with a module temperature of 25 °C for various irradiation levels. The top curve shows the module output under standard test conditions (STC[1]). It can be seen that the module supplies its maximum output of 100 W with a voltage of c. 17 V. This working point of the module is called the Maximal Power Point (MPP). It must be determined for all irradiation levels and module temperatures.

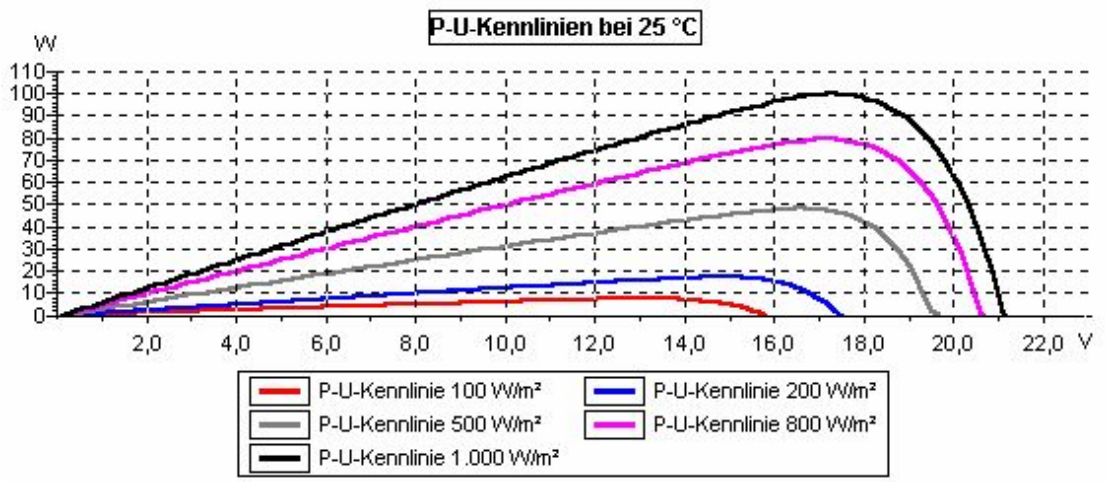

Image 1 Output curves for a 100 W module with various irradiation levels

One requirement of a PV system is that for a given irradiation and module temperature the module voltage is regulated so that the modules work at the MPP. This task falls to the inverter.

On the assumption that the modules are operated in MPP operation, PV*SOL® determines the power output of the PV module from the power output of the module under standard test conditions and the efficiency characteristic curve of the module. The efficiency characteristic curves are generated from the data on part load operation.

Image 2 shows the typical course of module efficiency at various temperatures.

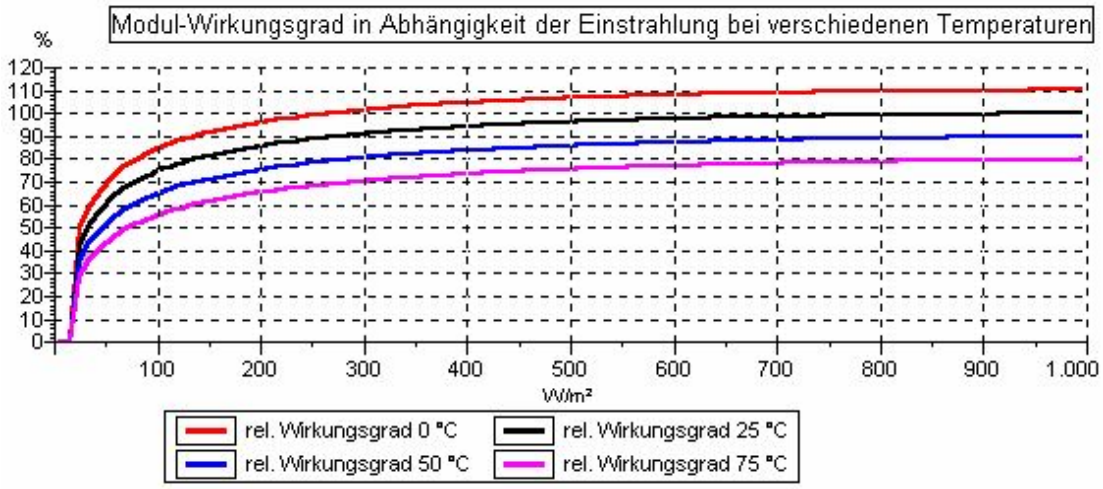

Image 2 Module efficiency at various module temperatures

The temperature dependency of the curve is determined from the characteristic curve at 25 °C ($\eta_{PV,MPP}(G,T_{Module}=25\,°C)$) and the output temperature coefficient $d\eta dT$:

$$\eta_{PV,MPP} = \eta_{PV,MPP}(G, T_{Modul} = 25°C) \cdot [1 + \Delta T \cdot d\eta dT]$$

If the MPP of the module cannot be maintained, the working point of the module must be calculated from the UI characteristic curve field (see image 3).

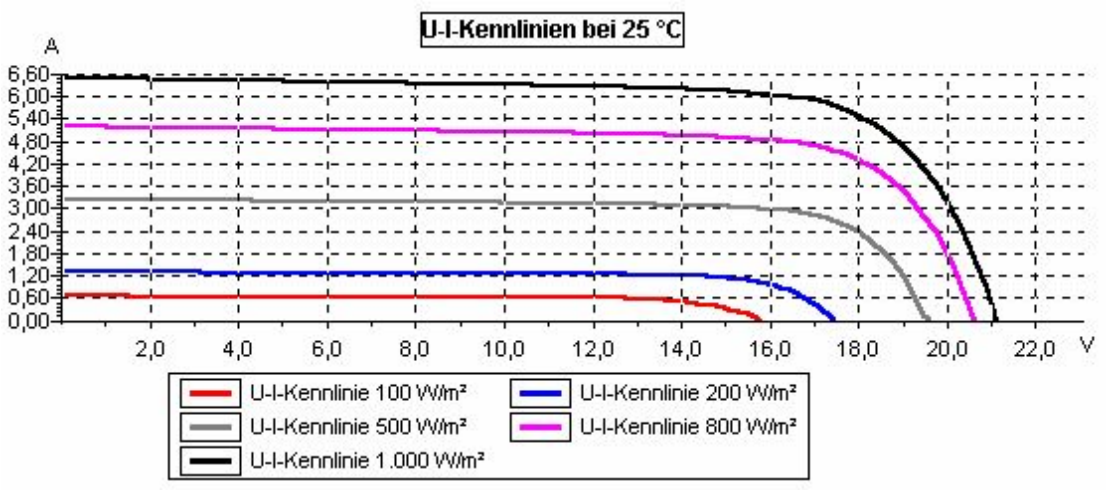

Image 3 UI characteristic curve field

The efficiency of the modules also takes into account the following losses:

• due to deviation from standard spectrum AM 1.5,

• due to mismatch or reduced yield as a result of deviation from manufacturer information and

• in diodes.

These output losses are deducted percentagewise from the module output. In addition, the reflection losses at the module surface must be evaluated as module losses.

1 Standard test conditions: 1000 W/m² vertical radiation, 25 °C module temperature and radiation spectrum AM 1.5 Module output at STC Maximal power point (MPP) Efficiency characteristic curves

3.3 Bases of calculation - inverter

The inverter has two functions. On the one hand, the DC generation of the PV modules is transformed to the voltage and frequency of the public power grid in the inverter. On the other, the integrated MPP tracker ensures that the PV array is operated at the Maximum Power Point (MPP).

Conversion to DC and AC is lossy. Via the efficiency characteristic curve, PV*SOL® calculates the output power depending on the input power.

Image 4 shows the typical course of a relative efficiency level. The output power of the inverter is determined as:

$$P_{AC} = P_{DC} \cdot \eta_{\mathrm{Nenn}} \cdot \eta_{\mathrm{rel}}$$

In order to simulate the MPP tracking of the inverter, the program checks at every calculation step whether the module MPP voltage can be set by the inverter.

If the MPP voltage is outside the MPP tracking range of the inverter, or if several arrays are connected to one inverter with different MPP voltages, the controller lowers the UI characteristics of the modules until the working point has been found at which the maximum output can be obtained from the PV array.

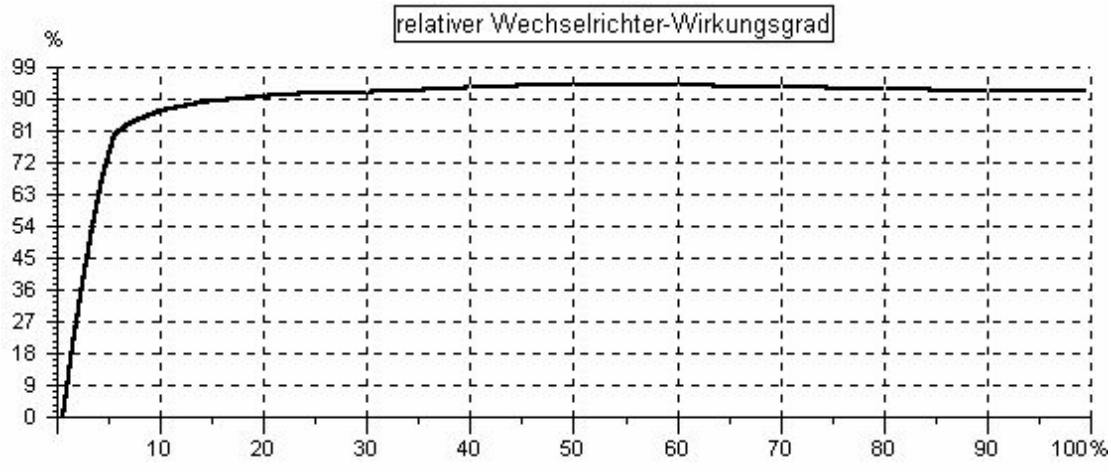

Image 4 Relative efficiency level of an inverter

In addition to the efficiency characteristic curve of the inverter, PV*SOL® takes into account the MPP matching efficiencies, the stand-by and night-time consumption and the input power threshold beyond which the inverter supplies power. All factors are taken into account in the inverter efficiency.

3.4 Bases of calculation - temperature model

The temperature of a PV module is of great significance when calculating the power output. An increase of 10 °C results in a power loss of around 5 %.

To determine the module temperature, the thermal balance equation is resolved in every time step of the dynamic temperature model. This process requires the current wind speed of the time step. If this is not included in the climate data record, a linear temperature model dependent on outside temperature and irradiation is automatically selected.

3.4.1 Linear Temperature Model

In this model, the module temperature has a linear dependence on the irradiation G according to:

$$T_{Modul} = T_a + k \cdot \frac{G}{G_{STC}}$$

The value of the constant k depends upon the type of module setup and a parameter for the maximum achievable heating at maximum irradiation (G_{STC} = 1000 W/m²) compared with the outdoor temperature T_a:

- Free-standing installation: k = 20°C.
- Roof integration, rear ventilation: k = 30°C.
- Roof or facade integration, no rear ventilation: k = 45°C.

3.4.2 Dynamic temperature model

Solution for the thermal balance equation

In order to take into account the thermal inertia, each simulation time step (1 hour) must be divided into multiple small time steps dt, in which the following differential equation is solved using the dT_{Module}. In

order to find the solution even under extreme conditions (e.g. a jump in the radiation from 0 to 1000 W / m²), dt is set for each calculation set and may be as small as a few minutes.

$$m_{Modul} \cdot c_{Modul} \cdot \frac{dT_{Modul}}{dt} + P_{el} = \dot{Q}_G - \dot{Q}_S - \dot{Q}_K$$

With

$$\dot{Q}_G = \alpha \cdot G \cdot A_{Modul}$$

$$\dot{Q}_S = f_E \cdot \varepsilon \cdot A_{Modul} \cdot \sigma \cdot ({T_{Modul}}^4 - {T_a}^4)$$

$$\dot{Q}_K = f(A_{Modul}, T_{Modul}, T_a, v_w, l_{char})$$

The following sizes are may be used:

m_{Modul}	: Modulmasse	α	: Absorptions-koeffizient
A_{Modul}	: Modulfläche	ε	: Emissionskoeffizient
c_{Modul}	: Wärmekapazität des Moduls	v_W	: Windgeschwindigkeit
T_{Modul}	: Modultemperatur	T_a	: Umgebungs-temperatur
$\dot{Q}_G$	: Absorbierte Leistung	P_{el}	: Elektrische Leistungsabgabe
$\dot{Q}_K$	: Konvektion	t	: Zeit
$\dot{Q}_S$	: Abgestrahlte Wärmeleistung	σ	: Stefan-Boltzmann-Konst.
l_{char}	: Charakteristische Überströmlänge	f_E	: Einbaufaktor

Influence of the module installation on the calculated module temperature

In addition to meteorological conditions (G, T_a, v_W) and the module-specific parameters, the installation of the module also has a significant influence on heating The following changes are made depending on the type of installation or mounting

- Free-standing mount: Installation factor $f_E = 2$
- Roof installation, back ventilated: Halving the radiated heat output Q_S, i.e. Installation factor $f_E = 1$. Unlike a freestanding mount, only the top of the array is in the radiation exchange with the environment.

- Roof or facade integration, no rear ventilation: In addition to halving Q_S (f_E = 1), there is also heat loss as a result of convection Q_K. In the model, this is achieved by reducing the effective wind speed by 3 m / s.

Determination of the wind speed at system height

The wind speed is determined from the scalar wind speed from the climate data (V_{W_10m}), which was measured 10 m from the ground:

$$v_w = v_{w,10m} \cdot \frac{\ln \frac{h_w}{z_0}}{\ln \frac{10\ m}{z_0}}$$

With a roughness length of the generator environment of Z_o = 0.3 m

3.5 Bases of calculation - cabling losses

In order to calculate cabling losses, the cable resistance R is first calculated from the cable cross-section A, the cable length I and the specific resistance of the material:

$$R = \sigma \cdot \frac{l}{A}$$

For copper, the specific resistance σ = 0.0175 Ω*mm²/m.

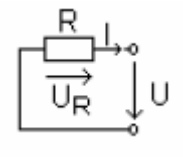

With

$$P_R = U_R \cdot I = R \cdot I^2$$

Based on the output, the following applies for the relative dissipation:

$$\frac{P_R}{P} = R \cdot \frac{I}{U}$$

3.6 Bases of calculation - evaluation parameters

The input data to define the evaluation parameters are as follows:

E_{in} = energy irradiated to the PV array surface

E_{PVuse}= solar energy generated (AC side) - inverter power consumption

E_{Last} = electricity requirement of power consumer

P_{nom} = installed PV array output

η_{STC} = efficiency of module at STC[2]

The solar fraction sets the usable photovoltaically generated energy (E_{PVuse}) in relation to the load requirement (E_{Last}).

Solar fraction = E_{PVuse} / E_{Last}

In grid connected operation, not just the energy used to meet the load but also the energy fed into the grid is part of the usable energy. As a result, the solar fraction can be more than 100 %.

The specific annual yield is the usable energy (E_{PVuse}) in relation to the installed output (P_{nom}).

Specific annual yield = E_{PVuse} / P_{nom}

Put another way, the specific annual yield is a measure of the PV system's annual full load operation hours. The term final yield is frequently found in the literature in place of the specific annual yield. This is determined from the annual full load hours divided by 365 days and is a measure of the daily full load operation hours.

Performance ratio = E_{PVuse} / E_{in} * η_{STC}

The performance ratio is a measure of the energy losses in the system which occur in comparison with the energy output of the PV array under standard test conditions. The output under STC is determined by the energy irradiated to the PV array surface (E_{in}) multiplied by the module efficiency under STC (η_{STC}). The performance ratio describes the efficiency of the photovoltaic energy which can be potentially generated in a given system environment.

The system efficiency is a measure of the conversion of the total energy irradiated to the array surface (E_{in}) by the PV system. The system efficiency is made up of the efficiencies of the PV array and the inverter and takes into account cabling losses and battery losses.

System efficiency = E_{PVuse} / E_{in}

2 Standard test conditions: 1000 W/m² vertical radiation, 25 °C module temperature and radiation spectrum AM 1.5

3.7 Bases of calculation - economic efficiency calculation

The economic efficiency calculation in PV*SOL®, according to the net present value method, is based on the following formulae:

The cash value (CV) of a price-dynamic payment sequence Z, Z*r, Z*r² ... over T years (lifetime) as per VDI 6025 is:

$$Barwert\ BW = Z \cdot b(T,q,r)$$

$$Barwertfaktor\ b(T,q,r) = \begin{cases} \dfrac{1-(r/q)^T}{q-r} & \text{für } r \neq q \\ \dfrac{T}{q} & \text{für } r = q \end{cases}$$

q: Simple interest factor (e.g. 1.08 at 8 % simple interest)

r: Price change factor (e.g. 1.1 at 10 % price change)

The following applies for the net present value:

Net present value of the total investment = Σ [CV of the price-dynamic payment sequences over the lifetime] - investment + subsidies

Positive net present values indicate an investment which can be assessed as economically positive. The pay-back time is the period the system must operate for the investment to yield a net present cash value of the overall investment of zero. Pay-back times of over 30 years are not supported. If the CV of the costs is converted into a constant sequence of payment (r=1), then the following applies to this sequence Z:

Z = [CV of costs] * a(q,T) with a(q,T): Annuity factor (= 1 / b(T,q,r) for r=1)

The following applies for the electricity production costs:

[Electricity production costs] = [annual costs Z] / [annual electricity generation]

3.8 Bases of calculation - design recommendation

For stand-alone systems in the quick design (for new projects only), PV*SOL calculates a design recommendation based on the Climate data record, the Inclination and Orientation of the modules, and on the Consumption. The result of this design recommendation is the output of the PV modules and the battery capacity.

For the design, PV*SOL requires the energy requirement and the irradiation on one design day. PV*SOL calculates these values from the given climate data record and the consumption of the selected Design month.

The battery is designed so that the energy requirement over the given Period of autonomy can be met entirely from the battery without it being charged.

The PV array is sized so that the number of batteries calculated above are completely charged from the lower discharge threshold within the given System recovery period. The energy requirement and the battery losses must be also be met within this period. In addition to the module orientation, whether or not an MPP tracker is available is also part of the array sizing. Without MPP tracking, it is possible that a 50W module supplies considerably less output at 100W irradiation.

4 PV*SOL® Components

The PV*SOL® components are:

- PV modules
- Inverters for grid connected and stand-alone systems
- Batteries
- MPP trackers
- Load profiles for electrical load
- Electrical appliances
- Climate data for the system site
- Tariffs for energy supplied to and drawn from the grid
- Pollutant mix for electricity from the grid and energy savings.
- Loans

The individual components are defined via the corresponding menu or the speed buttons.

5 Quick Guide - Working on Projects

In PV*SOL, a PV system is handled as project.

Menus and dialogs are arranged from left to right and top to bottom to visualize the workflow:

➔ **Simulate a PV system as follows:**

	1. Create a *new project*, using a) 2D = without the 3D Visualization, c) a *Quick Design*.	b) 3D Visualization or
	2. Define *Climate Data* and other *Conditions*	
	3. PV *system planning* 2D Define *Technical Data* of the system and the PV generator array Define *Losses* Define the *Shade* in 2D Use the system *Check*	3D Define systems using the *3D Visualization*: Terrain, Buildings (Roofs), Slopes Module Coverage or Modul Mounting and Module Configuration
 	4. *Calculations*: *Simulation* *Economic Efficiency Calculation*	
   	5. *Results*: *Project Report* Economic Efficiency, *Annual Energy Balance*, *Energy & Climate Data - Graphics*	

20 April 2012

6 Operating Instructions & Workflow

The program is operated by using the menus, the symbols on the button bar and the mouse. The parameters on which the calculations are based are set in the appropriate dialog window (see Main Screen).

PV*SOL® is a WINDOWS™ application, and the usual WINDOWS™ features and commands are incorporated as follows:

The formats for numbers, date and currency are as per the settings within the WINDOWS system control panel. If you change the settings in the system control panel you will have to restart PV*SOL® in order to activate the changes within the program.

All graphics within the program can be printed out. You are able to change the printer settings from within the program.

The online **Help** facility giving information on all PV*SOL® dialog windows and menus is available via the function key F1 or the **Help** menu. In the Help menu you can search under various headings and key words, and, by clicking on the green colored text, you can go straight to the next link. Or you can simply scan through the individual help texts.

The Variant Comparison table, the tables within the Graphics facility and the Appliances - Load Profile can be copied and pasted into other spreadsheet programs such as EXCEL.

6.1 User Interface (Menu, Tool Bar, Dialogs)

PV*SOL® is simple to use with the usual menu and tool bar.

A menu command is deactivated when the lettering changes from black to grey. For example the command Calculations/Simulation is deactivated when valid simulation results are available. This command is reactivated only when the simulation results are no longer valid.

All of the dialog windows required for inputting simulation parameters or to display results can be activated by clicking on the appropriate menu command, by using a combination of the ALT key plus the letter underlined in the menu command, or by clicking on the appropriate speed button symbol in the button bar on the left-hand side of the main screen.

The dialog is closed by clicking on **OK**, **Cancel** or **Close**, by clicking on the WINDOWS button marked with an X in the top right-hand corner of the dialog, or by the key combination *ALT+F4*.

The dialogs consist of input fields, selection fields , radio button , selection lists and buttons.

You can use either the mouse or the tab key to move between the fields within a dialog window. With the *TAB* key you move to the next field and with *SHIFT+TAB* back to the previous field.

The various values are keyed into the input fields. When the arrow points over an input field it automatically changes to a cursor. With a single click of the left-hand mouse button in the input field you are ready to enter text with the keyboard. By double clicking on the input field the entire text within the field is marked and will be overwritten as soon as you start to type.

The formats for numbering, date and currency are as per the settings within the WINDOWS system control panel. If you change the settings in the system control panel you will have to restart PV*SOL® in order to activate the changes within the program.

On quitting a dialog window with **OK,** the program checks whether valid formats have been used and at the same time tests if the entered values are within reasonable limits.

In addition to the input fields, the program uses selection fields (check boxes). These are small square or circular fields that are activated or deactivated with a single click of the mouse. If the selection fields are grouped together, only one selection is possible.

By clicking on the buttons in the dialog window you can open further dialogs. The buttons in the right or bottom button bar of a window (eg OK, Cancel, Copy, Close) control the window.

Check boxes allow selecting of multiple options, radio buttons allow selecting an option.

At the top of the main screen is a button bar with a number of speed buttons, each with a different icon. These icons represent the menu commands that you will use most frequently when working with the program. Clicking on the various speed buttons is the quickest and easiest way to get to the most important dialogs.

Each speed button is labelled with its menu title. You just have to position the pointer over the button icon and a label appears with the title.

6.1.1 Menu

The menu is used to open the various dialogs which are used to enter the project parameters.

If you want access the menu commands without using the mouse you can do so by pressing the Alt key and the corresponding underlined letter in the menu command.

6.1.2 Speed Buttons Bar

You can also quickly access the most important commands by clicking on the speed buttons in the button bar on the main screen.

These buttons represent those menu commands that you will use most frequently when working with the program.

Each speed button is labelled with its menu title. You just have to hover the mouse pointer over the button and a hint appears with the title.

New Project

Open...

Save

Technical Data (only systems without 3D visualization)

3D visualization (only systems with 3D visualization)

Climate Data Files

Tariffs

Individual Appliances

Appliances – Load Profile

Shade (only systems without 3D visualization)

Simulation

Economic Efficiency Calculation...

Annual Energy Balance

Energy and Climate Data...

Summary Project Report

Variant Comparison...

6.2 Load and Save File

Projects, components, tariffs and appliance profiles are saved to file or loaded from this dialog.

Each file type has its own format and a set file extension. These are:

.prj	for Projects
.wbv	for climate data
.emm	for the pollutant mix
.tar	for the from grid tariff
.eta	for the to grid tariff
.slg	for loads
.mod	for PV modules
.wrn	for inverters (grid connected)
.wra	for inverters (stand-alone)

.sch for shading

.vbi for individual appliances

.mpp for MPP trackers

.acc for Batteries

.cre for Loans

From this dialog you can **Select** files from those available in the list.

When you **Open** the dialog the directory that has been entered under the Options/Drives menu is displayed. If you want to select another directory as standard, you will have to do this in the **Drives** dialog.

When a file from the file dialog is **selected** a description of the file contents appears in the field labelled "File Reference".

You are able to exit the dialog with **OK** only after you have selected or entered a name in the "File Name" field. Click on the **OK** button to load the selected project.

When you **Save** an existing file the project automatically checks if you want to go ahead and overwrite the file.

The load file dialog for **Modules** and **Inverters** is different from the other standard dialogs. In addition to the file name, details on the contents of the files, ie manufacturer, type, output and voltage, are displayed. These details can be sorted by heading. Any new order selected will remain unchanged regardless from where the dialog is next opened. If you have already selected a type of module or inverter, this data record will be highlighted in blue.

6.3 Simulation

Starts simulation of the current project with the given parameters. The system is simulated at hourly intervals over a year.

The basis for the calculations can be found in the program user manual.

The simulation only takes a few seconds, although the exact time depends on the computer being used, the number of arrays in a system and the type of temperature model selected.

After simulation you can select whether you want to run the Economic Efficiency Calculation, or view the Annual Energy Balance, the Summary Project Report, or the Graph of Results.

You are also able to go back to the program's main screen and continue work on your project using the menu bar or speed buttons.

All results are now activated in the Results menu and can be viewed. As long as the project parameters remain unchanged you are not able to carry out the **Calculations/Simulation** command.

7 File Menu

Here you will find all of the commands you will need for organising project files and you can exit the program via **Exit**.

7.1 New Project

This dialog window appears automatically when you start up PV*SOL the first time. From here you can start defining a new project.

➔ **Proceed as follows:**

1. Choose whether you want to simulate a grid connected or a stand-alone PV system (not available with PV*SOL®-N for grid connected systems only).
2. Wählen Sie ein *Einspeisekonzept*: *Volleinspeisung* oder *Überschusseinspeisung*.
3. Wählen Sie, ob Sie die Anlage als 2D, also ohne 3D-Visualisierung planen wollen, oder ob Sie die 3D-Visualisierung nutzen wollen.
4. ☑ Mit Hilfe der *Kurzauslegung* können Sie Ihre Anlage schnell und komfortabel planen. Die Kurzauslegung ist eine vollständige Simulation der Anlage, wobei sinnvolle Standardwerte verwendet werden.
   Falls die Kurzauslegung inaktiv (graue Schrift) ist, ist die entsprechende Standarddatei stndrd1.prx (netzparallel) bzw. stndrd2.prx (netzautark) im Installations-Unterverzeichnis `/bin` möglicherweise gelöscht worden.
5. Bestätigen Sie Ihre Auswahl mit *OK*.

Hatten Sie vorher ein Projekt geöffnet, so erscheint nun eine Abfrage, ob dieses Projekt gespeichert werden soll.

Anschließend entspricht das PV*SOL-Hintergrundbild der von Ihnen gewählten Systemvariante.

Quick Design

If you answer ”Yes” to the question ”Do you want to start a new project with Quick Design?” the Quick Design screen will open. In this case the files stndrd1.prj (grid connected) or stndrd2.prj (stand-alone) will be used to provide standard values.

If the corresponding field is grey and cannot be selected, it means that the standard file has possibly been deleted. If so, you can copy these files from the project folder

(eg. c: \pvsol \projects \...) or rename an existing file from within Explorer.

If you already have a project open prior to starting up a new project, a prompt will open asking you if you want to save the project that is open before the Quick Design screen opens. On leaving the New Project screen the main screen background changes according to the type of system you have selected.

If you opt for starting a new project with Quick Design, the Quick Design dialog opens. From here you can simulate a solar system very quickly.

The dialog windows vary according to the type of PV system – grid connected or stand-alone.

7.2 Quick Design

Quick Design allows a full system simulation to be carried out.

➔ **Start the Quick Design by using *File › New Project › Start new project with Quick Design › OK***

In addition to the entry parameters within the Quick Design dialog, all other quantities are provided by the program as standard values.

After simulation you are given a Summary Report. The Summary Report can be printed out on one side of A4 paper.

If you want to change the values entered in the Quick Design window and repeat the simulation, click on **‹‹ Back**. Otherwise quit preview with **OK** and you can work on the project from the program and then run a new simulation.

7.2.1 Quick Design – Stand-Alone Systems

When designing a stand-alone PV system with Quick Design, after selecting the climate data file and entering values for the array orientation, you will have to define the consumption.

Click on the **Consumption** button to define the

Individual Appliances. From the Quick Design screen you are not able to define the consumption by load profile.

PV*SOL® makes a design recommendation according to the selected criteria: low, medium or high solar coverage, or depending on a chosen month of the year.

Click on the **Design** button and the required battery capacity and PV performance is shown. The desired system voltage needs to be selected, as does whether a back-up generator will be used.

After selecting the types of battery and PV module, click on **Sizing** to view details on the performance and capacity reached. If the batteries, modules and system voltage selected do not match up a message appears asking you to check the components or adjust the voltage.

The program selects a system with one PV array and direct battery connection. Direct current appliances are presumed to be in use.

Click on **OK** to quit the dialog and the adjusted values will be saved into your current project.

Click on the button **Save as Default** to save the values as a standard file. The next time you design a new project the Quick Design will open with these defaults.

With **Cancel** the previous conditions are reinstated. Click on

›› Simulation to start the simulation.

7.2.2 Quick Design – Grid Connected Systems

From the desired installed system power output and according to the selection of module and inverter types, the program calculates both a suggested number of modules and inverters, as well as recommending module connections.

The program default settings provide a system consisting of one array that can have a number of inverters. All the energy produced is fed into the grid, so the appliances do not need to be defined.

When you exit the dialog with **OK** the amended values are saved as your base project and the next time you start to design a new project the Quick Design window will open with these defaults.

With **Cancel** the previous conditions are reinstated. Click on **Continue** to start the simulation.

7.3 Project Administration...

In Project Administration you can enter the project name, the project number, the project designer and the location of the PV system.

For easy project identification, these details will appear on any printouts that you make.

From the main screen you can also enter a system variant reference. This appears as a file reference with the project file name.

Whenever you exit a project with the command **File**/**Save As...**, the project administration details are saved with the project.

With the command **File**/**Save As...** you can therefore save as many versions of a project as you wish, and they are easily recognisable by the comment you enter in the variant reference field.

7.4 Open...

File/**Open...** opens the Open File dialog, where all projects are listed – ie all files with the file ending *.prj.

Select a file and the system variant reference appears in the file reference field.

Double clicking on the file name, or clicking on the **OK** button, opens the selected project.

If you are working on a project, and at the same time open another project, a message will appear asking if you want to save any changes made to the project you were originally working on, which will then close to enable you to work on the project you have opened.

The other way to open existing projects is to go to the **File** menu. At the bottom of the menu is a list of the projects you have previously worked on, the first on the list being the project currently open. Just double click on any of the project file names to open the file.

7.5 Save or Save As...

File/**Save** saves the current project to the valid file path and name as previously saved. If a project file does not yet exist (ie you are saving a project for the first time), the **Save As...** dialog appears.

File/**Save As...** saves the current project under a new name of your choice. The system variant reference is automatically selected as the file reference.

This command is used when you want to design a new project or design a new version of a project.

You should create a separate folder for each project, into which you can then save all the different versions of a project.

7.6 Exit

Go to **File**/**Exit** to close the program.

If you have not yet saved the changes you have made to the current project, a message will appear asking if it should be saved.

If you wish you can change the program settings, so that the last project you have worked on automatically opens the next time you use PV*SOL (instead of the Quick Design dialog), this is done via **Options**/**Paths**.

8 Conditions Menu

Before a simulation can be carried out, the ecological and economic conditions have to be entered or confirmed using the menu commands listed to below.

These details belong to the system, but are dependent on the location.

With the exception of the To Grid Tariff this information is given by loading files from the database (either those delivered with the program, or any you have defined yourself in the Database).

8.1 Climate Data Files

With the *Conditions › Climate data* menu command you open the module **MeteoSyn**, from which you can load the climate data file for the project location or the site closest to the project location. The files (eg London.wbv) contain values over a one year period for global radiation, external temperature and scaled wind speed in hourly format.

Climate data can be viewed in graph format before and after simulation with the menu command **Results › Energy and Climate Data...**. Wind data is only evaluated when the “Dynamic Temperature Model” is selected under **Options › Settings › Calculation Model**.

The irradiation onto the (tilted) PV surface, combining diffuse and direct radiation, is generated from global radiation.

The ground reflection (albedo), entered in the **Technical Data › Calculation Model › Losses** dialog, is accounted for as a diffuse radiation gain.

The radiation reflected off the module surface is accounted for as a reflection loss. After simulation you can view this data in diagram format under **Results › Energy and Climate Data...**. The details are divided into radiation onto the tilted PV array surface and radiation minus reflection and are shown in W/m².

Reflection losses on the module surface lead to a decrease in the module’s efficiency.

8.2 Pollutant Mix

Pollutant Emissions results are loaded from the (Conditions/Pollutant Emissions/)Load file dialog. Here you can choose from a selection of files provided under Pollutant Mix in the database.

If you want to define a new pollutant mix, you can do this via the **Database/Pollutant Mix** menu. Once saved you can then use the file for future projects.

9 Appliances Menu

There are two ways of setting the electricity requirement.

If you are able to give a figure for the total annual energy consumption, you should enter this value in the load profile dialog. If not, you can enter values for a range of individual electrical appliances.

If you use both of the above methods, the program calculates the total requirement. If, for example, you have entered values in the load profile dialog, the energy requirement is shown when you open the individual appliances dialog, and is then included in the calculation of the total energy requirement.

When designing a stand-alone system you will need to select either AC or DC appliances in the menu System › Technical Data.

9.1 Load profile - List of Appliances

Menu *Appliances › Select Load Profile › Definition of Electrical Appliancesby Load Profile*

A list of appliances on the left displays names and total annual energy consumption, including the *Total annual energy requirement* calculated from these and the *hourly maximum value*. The *hourly maximum value* is the maximum energy requirement that occurs during an hour of the year.

The *New Consumer* and *Close buttons are located at the bottom right.*

➔ **Proceed as follows:**

1. Click on **New Load Profile** to create another electrical appliance.
   Up to four electrical appliances can be defined.
2. Click on the symbol for electrical appliances, to open the *Electricity consumers* dialog for selected consumers.
   -› For details, see Load profile - Appliances via load profile
3. Repeat the process for all relevant consumers.
   The *Total annual energy requirement* and the *hourly maximum value* that you have calculated are displayed in the individual consumers.
4. Exit the dialog by clicking *Close*.

9.1.1 Load Profile - Appliances via Load Profile

Menu *Appliances › Load Profiles: Selection › Definition of electrical Appliancesby Load profile › Electrical Appliancesby Load Profile*

➔ **Proceed as follows:**

1. Click on the icon to open the dialog *Electrical Appliances by Load Profile*.
2. Enter a name.
3. Define the *Electricity Requirement* , i.e., the *Annual Energy Requirement* in kWh, as well as the *Weekend Consumption* for Saturdays and Sundays in % of the weekday requirement.
   The *maximum hourly value* is calculated and displayed.
4. Load and edit a consumption profile from the database by clicking on the *Consumption Profiles* button.
   The profile name is displayed.

5. Define up to three holiday periods by clicking on the *Holiday Periods* button.
   - The dialog "*Holyday Periods*" opens.
   - Enter up to three holyday periods.
   - Allocate them electricity requirements as a % of working day consumption.
   - Confirm and exit with *OK*.
6. Click on the *Graphic* button to show the consumption profile as a graphic.
   - You can modify the layout of the graphic.
   - You can copy it to the clipboard or print it out by using the menu *File ›* and the toolbar of the dialog.
   - You can export the numeric values of the consumption profile to a spreadsheet:
   Right-click the X-axis and then on *Scaling* (context menu) tto set the display interval and the bar width.
   Confirm with *OK*.
   The values have now been copied to the clipboard and can be copied into a spreadsheet.
7. To delete this appliance, check the box *Delete Appliance* and confirm that you want to delete by clicking *OK*.
8. Confirm and exit with *OK*.

9.1.2 Holiday Periods

Menu Appliances › Load Profiles: Selection › Definition of Electrical Appliancesby Load profile › Electrical Appliancesby Load Profile › Holyday Periods

➔ **Proceed as follows:**

1. Define up to three holiday periods by clicking on the *Holiday Periods* button.
   The dialog "Holiday Periods" opens.
2. Enter up to three holiday periods, use the format dd.mm
   If you do not want to enter any holiday periods, enter the same dates in both/all entry fields.
3. Allocate them electricity requirements as a % of working day consumption.
4. Confirm and exit with *OK*.

9.2 Defining load profiles

Menu *Databases › Load Profiles*

You can create load profiles yourself and modify them.

Go to the menu **Databases › Load Profiles** to open the *Electricity Load Profile* dialog. Here, you can open load profiles from the database, edit loaded load profiles or define your own load profiles.

5. Click on the *Load* button and select a load profile from the list which best meets your requirements and confirm your selection by clicking *OK*.
6. Enter a name for the load profile in the text field of the dialog window.
7. Choose a tab to select the day profile to be edited.
   Summer = May, June, July, August
   Winter = November, December, January, February
   Transitional seasons = March, April and September, October

8. In the selection field on the left, select one hour of the day. The corresponding percentage power consumption is edited in the input window above the selection field.
9. Repeat this procedure for all hours you wish to edit.
10. The *Total* of percentage values of power consumption is shown below the selection field. This *Total* must come to 100%. You can achieve this by either adjusting the values or clicking the *Standardize* button. The program now averages the values in line with your settings.
11. The percentage power consumption values of one day can be transferred to another day using the *Copy* and *Paste* buttons.
12. The *Annual Profile* tab shows the load profile of the entire year; this can also be edited.
13. Click *Save* and then enter a name to save your personal load profile.

You can then use these load profiles for defining consumption as described above.

9.3 List of Individual Appliances

Menu *Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances*

Consumption of up to 20 individual appliance can be entered .

➔ **Proceed as follows:**

Click the button

New, to create an individual appliance,
Load, to open an individual appliance,
Delete, to remove an individual appliance,.

14. The selected individual appliance is displayed on the left.

To define the hourly basis and the other properties of an individual appliance, click on the icon left of the name of the individual appliance in the list. The *Individual Appliances* dialog window opens.
-› more details refer to: Define an Appliance

15. The *total annual energy requirement* and the *maximum hourly value* are calculated and displayed below the individual appliances.
The *maximum hourly value* is the highest possible energy requirement of an hour, over a whole year.
16. Exit the dialog with *Close*.

9.4 Define an Appliance

Menu Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances › Individual Appliances

➔ **Proceed as follows:**

Click the button Load to open a list of included individual appliances to select one as basis for your own appliance.

17. Enter a *name* for the individual appliance

18. Select the *type* of individual appliance from the following categories
    - o User-independent appliance (e.g. refrigerator)
    - o User-dependent appliance (e.g. television)
    - o Short-time use appliance (e.g. coffee machine)
    - o Light
19. Enter, if applicable, the *Power* [W] and the *Standby Power* [W] and, for user-independent appliances, the *Annual Energy Requirement* [kWh].
20. *Operating hours*
    Depending on the choice of *Type*, further time definition options are shown in the lower part of the dialog window, using which you can define the individual consumption behavior of the appliance:

Appliance type	**Operating hours - Definitions**		
	all days the same / Day	**12 Months**	**24h Day**
User-independent appliance		x	
User-dependent appliance	x	x	x
Short-time use appliance	x	x	
Light	x	x	x
➔ **Instruction:**	Uncheck ☑ the option "*all days the same*" and define individual daily reduction times.	*in Operation*: Click on month field or day field (green) *Not in Operation*: Click on month field or day field (white)	*in Operation*: Click on hour field (green) *Not in Operation*: Click on hour field (white)

- User-independent appliance:
  - *appliance runs constantly* or
  - *appliance runs every* X hours/Minutes.The duration is calculated automatically from the *annual energy requirement* and, if applicable, the *Stand-by Input*, you have entered.
  - In combination with the months and days in use, the total number of operating days is calculated and displayed.
- User-dependent appliance:
  - *nightime only*: Operating hours are valid, if simultaneously, the global irradiation is zero.
  - *daytime only*: Operating hours are valid, if simultaneously, the global irradiation is bigger than zero.

- in combination with *all days the same* / *Day*
- In combination with the months and days in use, the total number of operating days is calculated and displayed.

- Short-time use appliance:
  - Enter the period of use in [min] or energy requirement in [kWh] per use.
  - Enter the number of uses per hour (in combination with *all days the same* / *Day*).
  - in combination with the months and days in use, the total number of operating days is calculated and displayed.
- Light:
  - in total darkness: The given operating hours are valid, if simultaneously, the global irradiation is zero.
  - at dusk: The given operating hours are valid, if simultaneously, the global irradiation is less than 20 W/m².
  - cloudy weather: The given operating hours are valid, if simultaneously, the global irradiation is less than 50 W/m².

21. Click on *Save* to store your entries.
22. Click on the *Graphic* button to open a dialog window with a graphical representation of the individual appliance's power requirements.
23. Exit the Dialog with *OK*.

9.4.1 Individual Appliances: User-Independent Appliance

Menu Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances › Individual Appliances

A user-independent appliance is not normally switched on and off by the user, but runs automatically for long periods of time – e.g. refrigerator, deep-freeze.

Stand-by: an entry is not possible in the case of an appliance in constant use.

Annual Energy Requirement: the annual energy requirement should be given for general operation over the whole year.

Operating Times:

Appliance in Constant Use: the appliance is generally switched on the whole time.

Switch on Every...: sets the switching-on interval. Define the appliance by the intervals it remains switched on.

9.4.2 Individual Appliances: User-Dependent Appliance

Menu Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances › Individual Appliances

A user-dependent appliance is used regularly and at certain times, eg TV, computer.

Stand-by: an entry here is only made for appliances with this facility where stand-by is always active when the appliance is not in operation.

Operating Times:

Clock: the hours of operation are set by clicking on the fields (green field = in operation, white field = not in operation).

☐ *All days the same*: if the tick is removed, it is possible to enter different operating times for all the days of the week.

No Other Restriction: the operating times are as defined by the clock.

◉ *Nights Only*: the operating hours are only valid if, at the same time, global radiation equals zero. .

◉ *Days Only*: the operating hours are only valid if, at the same time, global radiation is greater than zero.

in use: click on month or day (green) *out of service*: click on month or day (white)	*in use*: click on hour field (green) *out of service*: click on hour field (white)

9.4.3 Individual Appliances: Short-Time Use Appliance

Menu *Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances › Individual Appliances*

A short-time use appliance is a user-dependent appliance that is generally switched on for less than an hour each time it is used, e.g. iron, coffee maker.

Output: Electricity requirement in [kWh] per use

Stand-by Input: an entry here is only made for appliances with this facility where stand-by is always active when the appliance is not in operation.

Operating Times – per use:

- Enter the period of use or
- enter the electricity requirement per use

Hourly Use:

- Enter the number of uses per hour for each hours of the day in the bar.
- If the tick is removed at ☐ *All Days the Same*, it is possible to enter hourly use separately for each day of the week.

9.4.4 Individual Appliance: Light

Menu Appliances › Individual Appliances: Selection › Definition of Electrical Appliancesby Individual Appliances › Individual Appliances

An appliance is defined as a light when it is switched on depending on the amount of daylight.

Output: Electricity requirement in [kWh]

Stand-by Input: an entry here is only made for appliances with this facility where stand-by is always active when the appliance is not in operation.

Operating Times:

☐ *All days the same*: if the tick is removed, it is possible to enter different operating times for all the days of the week.

Clock: The hours of operation are set by clicking on the fields (green field = in operation, white field = not in operation). The appliance can only operate within the defined operating hours.

No Other Restriction: the operating times are as defined by the clock.

Full Darkness: the operating hours are only valid if, at the same time, global radiation equals zero. .

Dusk: the operating hours are only valid if, at the same time, global radiation is less than 20 W/m².

Dull Weather: the operating hours are only valid if, at the same time, global radiation is less than 50 W/m².

9.4.5 Kilowatt-Hour Price

The price per kilowatt-hour for each tariff period - high tariff (HT), low tariff (LT) and any special tariff (ST) - is defined in this dialog. In order to be able to define the tariffs for special periods, these have to be entered under **Tariff Time Periods**.

Inflation:

The rates that need to be entered into the table are basic prices that produce the kilowatt-hour rate when multiplied by the Inflation. With the Inflation the grid utility company takes the current energy price and eg. wage increases into account. Normally, only the basic price level is used in the low voltage range, so that the Inflation is 1 in this case.

Summer/Winter Different:

Different kilowatt-hour rates can be entered for summer and winter times. In this case the prices are not valid for the whole year's energy consumption, but for summer and winter periods. If at the same time **Different Pricing Bands for Each Tariff Period** is selected you can separate out the kilowatt-hour rates for summer and winter periods into high and low tariffs.

Staggered Consumption Regulation:

If this selection is made the valid kilowatt-hour price is given as follows:

With a total annual consumption during HT periods of 600,000 kWh, for example, the price band starting from a consumption level larger than 500,000 kWh is valid, for the total energy produced during the HT period HT energy the basic price of 0.35 €/kWh is valid.

Consumption Zone Regulation:

On making this selection the text of the first column changes in order to make the prices given clearer. "Consumption larger than" becomes "Each further kWh from". The valid kilowatt-hour rate is given as follows:

With a total annual consumption during HT periods of 600,000 kWh, for example, a basic price of 0.36 €/kWh for the first 250,000 kWh is valid, for the second 250,000 kWh the basic price of 0.35 €/kWh is valid and for the final 100,000 kWh a basic price of 0.33 €/kWh is valid.

The total HT kilowatt-hour rate is therefore calculated as follows:

Total HT kilowatt-hour rate : (250.000 kWh * 0.36 €/kWh + 250.000 kWh * 0.35 €/kWh + 100.000 kWh * 0.33 €/kWh) * Inflation

Different Pricing Bands for Each Tariff Time Period:

On making this selection the kilowatt-hour rate for each tariff period is given its own worksheet. In this case the valid pricing band is no longer given as the total annual consumption, but as the total consumption in the time period that is valid for each worksheet. If, for example, **Summer/Winter**

Different is not selected, then the valid kilowatt-hour rate for the winter HT is only given in the total consumption for summer and winter HT.

See also: From Grid Tariff

9.4.6 Load Utilisation Period Discount by Table

Instead of a linear climbing load utilisation period discount (see Discounts), it is also possible to account for price bands in a table. The discount table values can be entered in the Load Utilisation Period Discount dialog. Here it is also the case that a Load Utilisation Period Discount is first observed when the minimum load utilisation period is reached.

9.4.7 Power Measurement

The basic specifications for power measurement are entered in this dialog. Further specifications can be made depending on the type of power measurement selected. The following power measurement categories are available:

- No Power Measurement
- 96 Hour Measurement
- Standard Calculation (¼ hour power measurement)
- Light/Heavy Load Maximums
- No Power Measurement

If the tariff for energy supply from the grid suffices without power measurement, then you should select ”No Power Measurement”.

96 Hour Measurement

With the 96 hour tariff the electricity consumption in kWh within 96 consecutive hours is added together in a consecutive time window. These hourly values are called power values (Pow. Val.). The highest power value within the time period measured is used for the calculation of power payment. The power payment is the sum of the highest power value multiplied by the valid load price for annual electricity consumption according to the given pricing band.

During 96 hour measurement with time zone regulation, the recording of the power values during low tariff is suspended without changing the consecutive timing for the 96 hour measurement periods. In this case **Measurement Only During HT Periods** must be selected in the Load Price dialog

Standard Calculation (¼ hour power measurement)

This calculates the power from the average value of the highest monthly power output figures. The number of months that are used to calculate the maximum annual power output is entered in the Load Price dialog.

Light/Heavy Load Maximums

¼ hour power measurement, with the time period used for providing the billing load being limited to the so called heavy load periods. These heavy load periods are entered in the Heavy Load Periods dialog. Further definition of the heavy load peak is described under **Standard Calculation**.

The lowest monthly light load is entered separately.

Output peaks during low output periods are only considered if the monthly low output peak reaches a level above the given annual peak power output at peak load times. The monthly differences of these values are sorted according to size and an average value is calculated. The resulting difference is only partly used in the calculation, the factor is entered in the Load Price dialog. The number of months used

for producing a figure for the light load peak is also entered in the Load Price dialog. The sum of the heavy load maximum and the allowed for light load share gives a figure for the calculated power.

Set Load Price:
The electricity payment is made up of two parts: a set price and a price dependent on consumption. The set load price must always be paid separately from the price for grid power actually used.

Hourly Peaks in the Defined Load Plus:
(only for Standard Calculation and Heavy/Light Load Maximums)

Depending on the grid utility company, monthly power outputs are measured in ¼ or ½ hour averages. The highest output during the year is multiplied with the given specific load price, in order to give a figure for the annual load price that will have to be paid. In the program the highest monthly output figure is the highest occurring average hourly output in each month (to account for the time stages). This leads to lower output peaks because the ¼ hour variations are levelled out. In order to correct this the highest monthly outputs for calculating the highest annual output are multiplied by the ¼ hour peaks in the defined loads plus. Depending on the type of appliance, the size of the area supplied, and any measured loads to hand, a percentage figure between 0% and 50% must be entered here. For typical housing estates with an annual consumption of more than 100,000 kWh, an annual consumption of 5-10% can be used for the calculation.

Minimum Power Output:
(only for Standard Calculation and Heavy/Light Load Maximums)

This measure is only used in the calculation if the maximum output is less than this value.

Wholesale Provision:
(only for Standard Calculation and Heavy/Light Load Maximums)

Instead of a set load price, a price for wholesale provision can be requested. This is paid if the hours of full use (HFU) do not reach the set threshold value. The wholesale provision price (WPP) is calculated as follows:

WPP = price [€/kW] * max. power output

* (1 HFU/hours of minimum use)

Max. power output: the maximum power output calculated by the program, or possibly the minimum output.

HFU:
Hours of full use = total annual kWh output/maximum output

9.4.8 Discounts

General Discount:
Here you can enter rebates/discounts that are guaranteed regardless of consumption, eg a discount for electricity drawn at the 30 kV voltage level.

Load Utilisation Period Discount:
(only for Standard Calculation and Heavy/Light Load Maximums in the Power Measurement dialog)

The load utilisation period is the relationship of total annual energy drawn from the grid to the billing load, and is a measurement of the regularity of energy use. With some tariffs or special deals the electricity company gives the customer a discount from a point over a certain minimum load utilisation period. This discount is, as a rule, included in the total kilowatt-hour and load tariff payments. In the case that the discount is only observed for HT energy and the load price, it is referred to as the HT utilisation period rebate.

Minimum Load Utilisation Period:
A discount is first included in the calculation when the load utilisation period is above this figure. If the usage is below this figure, an additional charge does not have to be made in compensation.

Load Utilisation Period Discount Valid for:
Here you can select the payment categories for which the load utilisation period discount are valid for.

Load Utilisation Period Discount by Formula:
If this option is selected the load utilisation period discount is calculated using the following formula:

if the load utilisation period – minimum load utilisation period › o load utilisation period discount = Factor X * (load utilisation period – minimum load utilisation period)

Load Utilisation Period:
The relationship of total annual energy drawn from the grid to the billing load.

If the calculated load utilisation period discount exceeds the maximum load utilisation period discount, this figure (ie the greater) is observed.

Load Utilisation Period Discount by Table:
Instead of a linear climbing load utilisation period discount, it is also possible to account for price bands in a table. The discount table values can be entered in the Load Utilisation Period Discount dialog. Here it is also the case that a load utilisation period discount is first observed when the minimum load utilisation period is reached.

9.4.9 Heavy Load Periods

The heavy load periods for the grid are defined in this dialog.

Heavy Load Periods - Summer/Winter Different:
If you click on this button you are able to enter all the heavy load periods separately for summer and winter.

Heavy Load Periods – From... To:
If the heavy load periods for summer and winter are different, this is where you define the beginning and end of winter time for the heavy load periods. Entry of heavy load periods is made in date format dd.mm. .

New Heavy Load Periods Valid From:
With the assistance of this field you are able to define the days in the week that heavy load periods are valid on. The days of the week are given in the first column, so that it is clear for which day the time entered is valid.

Heavy Load Periods:
You are able to enter up to 5 time periods (from hour to hour) for each day of the week. Entry is made in time format.

9.4.10 Discounts/Supplements

You can enter Discounts and Supplements from the electricity utility separately on the two pages provided.

9.4.11 Tariffs

This is where you set the tariffs for power supply to and from the grid (**Conditions**/**Tariffs** menu).

Clicking on the **To Grid Tariff** button opens the To Grid Tariff dialog. From here you can define or load a tariff.

Clicking on the **From Grid Tariff** button opens the Load File dialog and you can then choose from the tariffs provided in the database under From Grid Tariff. To help you choose the correct tariff level, a description of the tariff is given in the file reference field.

In the (Electricity) Tariffs dialog, under **Supply Concept**, you need to select whether all PV energy produced should be fed into the grid (select **Full Supply**), or whether the energy requirement of the appliances connected to the system should first be covered (select **Own Use**).

Even if you select the full supply concept, you are still able to define the appliance load and thereby monitor the overall costs of electricity used by the appliances connected to the system.

9.4.12 Tariff Time Periods

The high tariff periods (HT) and any special tariff periods (ST) are defined here. These tariff periods are valid for the supply of energy both to and from the grid utility.

Winter Time: From... To:
Entry of the tariff period for winter is made in dd.mm format. .

Different Tariff Periods – Summer/Winter:
Select to enter separate tariff periods for summer and winter.

Define Special Tariff Periods:
Select to create a new worksheet for the entry of a special tariff period in addition to high and low tariff periods. Separate kilowatt-hour rates can be entered for these times in the Kilowatt-Hour Price dialog. When a high tariff period is also defined as a special tariff period, this period is valid as a special tariff period.

New HT Periods Valid From:
With the assistance of these selection fields you can define which days in the week different tariff periods are valid on. The first column shows on which days of the week the times entered are valid.

High Tariff Periods:
You can enter up to 5 time periods (**from** ... **to** ... hours) per day. Enter these values in time format.

9.4.13 Supplements

Supplements:
Here you can enter HT or LT energy and the load price, with any supplements, as a percentage figure.

Set Costs [€/a]: (eg accounting fees)
Set annual costs are entered here, such as measurement and billing costs, that must be paid regardless of the consumption.

10 System Menu

➔ **Precondition: Planning a 2D system**

10.1 Technical Data

System › Technical Data

The sheets used vary according to the system type (grid connected or stand-alone).

3D: PV*SOL opens the 3D Visualization. There you define the terrain, buildings or slopes, cover roofs, mount modules and wire them by using 3D objects. The 3D Visualization has its own help.

2D: The technical data for the system configuration are entered in this dialog, which is made up of a number of worksheets.

➔ **Proceed as follows:**

1. On the first page "*System*", you need to select whether the system uses an *inverter system* or *multiple inverters*.
2. Enter the *number of* Arrays for both types of system.
   You can enter up to a maximum of six arrays.
   A corresponding number of pages then appear on the bottom of the dialog, so that you can define the parameters for each sub-array separately.
   With a single array the page is labelled "*Array*". A number of sub-arrays are labelled: "*Array 1*", "*Array 2*" etc.

About the buttons located on the right hand side of the dialog, refer to:

1. Losses
2. System Check
3. Click on *System Diagram* for displaying a system sketch. This sketch also forms part of the Summary Report.
4. If the System Check is positive, you can click on the Simulation button to start the Simulation.
5. Close the dialog with *OK*.

System Inverter

System › Technical data › (Inverter concept) One system inverter › System inverter

➔ **Requirement:**

On the *System* page, the option *System inverter* is selected in the inverter concept area.

➔ **How to proceed:**

1. Select a suitable system inverter.

The following data are displayed:

MPP tracking range,

MPP voltages (STC) of the arrays,

Inverter output,

System output

10.1.1 Technical Data – Stand-Alone

(not available with PV*SOL®-N)

10.1.1.1 Tab *System*

With stand-alone systems you can select either **MPP Tracking** or **Direct Battery Connection**.

If you opt for MPP tracking you will have to select whether you want to employ one MPP tracker for the entire system or one for each array.

You will also have to select between Direct and Alternating Current Appliances.

With the use of AC appliances you will need to define a stand-alone system inverter on the worksheet labelled "Stand-Alone Inverter".

If you plan the use of a **Back-up Generator** a sheet is also provided for entering the parameters.

10.1.1.2 Tab *PV Array* – Stand Alone

The settings on the page labelled "Array" or, if a number of sub-arrays are being used, on the pages labelled "Array 1", "Array 2", etc, vary depending on the selected system operation.

Each PV array can be given a reference.

Click on the **PV Module** button to open the Load File dialog and you can select from one of the database files provided. Tick the corresponding box and the module selected is used for all sub-arrays.

If the module you want to use isn't included in the database, you will have to go to Database/PV Module and then enter the details. Then you can go back to "Technical Data" and select your module.

When you exit the Load File dialog with **OK** the parameters entered into the database are taken into the current project.

The **Full Data Record** for the module you have selected appears in an information window when you hold the cursor over the **PV Module** button.

The installed output for the array and the system output (see PV output on the "System" worksheet) is calculated from the **Number of Modules**.

In selecting the **Number of Modules in a String** you will have to match the MPP tracking range or the battery voltage against the module's MPP voltage.

If you want to use an MPP tracker in your system design click on the **MPP Tracker** button to open the MPP Tracking Characteristics dialog. From here you can load or define an MPP tracker.

In order to convert the irradiation onto the horizontal surface, as given in the climate data, into irradiation onto the mounted PV array surface the Inclination and Orientation have to be entered.

You are also able to define single or double axis **Tracking** here. With **Single Axis Tracking** the program works with a set inclination while tracking the sun's azimuth angle. With **Dual Axis Tracking** the array is positioned so that the sun's radiation falls vertically onto the array at all times. When the array is in a **Set Position** (ie with no tracking) both the tilt angle and the orientation have to be entered. With **Single Axis Tracking** only the tile angle has to be entered.

The resulting annual irradiation per square metre, taking shade into account, is shown under **Irradiation**. Click on the **Graph** button to view or print details.

Click on the **Max. Irradiation Inclination** button to find out the tilt angle required for maximum annual irradiation onto the array surface. With stand-alone systems the optimal inclination can deviate from the **Max. Irradiation Inclination**. The value appears on the button and can be accepted into the entry field. The current irradiation shown is dependent on this entry.

The Type of Mount can be selected from **Free-Standing**, **With Ventilation** space and **Without Ventilation** space.

The **Direct Current Cabling** to the charge controller is the cabling from the PV module string distributor to the charge controller. You can select from the standard **Cable Cross Section** measurements or enter your own measurement.

The losses from each individual module cable running up to the string distributor can be accounted for in the "Calculation Model and Losses" dialog.

If a number of cables are run to the charge controller, you should add the cross section measurement for each cable together.

10.1.1.3 Tab Stand-Alone Inverter

If AC appliances are selected the system will need an inverter to convert the DC energy provided by the PV system into AC energy.

Click on the **Stand-Alone Inverter** button to open the Load File dialog. If the inverter you want to use isn't among the files listed you should go to Database/Inverter/Stand-Alone and enter the required parameters.

Information on sizing is given in information fields (with a grey background). The inverter's nominal AC output should correspond to both the appliances' maximum power requirement and the battery's nominal DC voltage.

10.1.1.4 Tab Battery

On the sheet labelled "Battery" the type and number of batteries is defined.

Click on the **Battery** button to load a battery file from the database.

If the battery you want to use is not provided, go to the **Database**/Battery menu and enter the parameters.

The **Number** and the **Number in String** need to match the inverter's nominal DC voltage and the MPP tracker or the module voltage.

If you plan to use a back-up generator you should enter 50% for the **Charge Condition at Simulation Start**, otherwise **Preliminary Simulation** should be marked to establish the charge condition (in this case the percentage figure is ignored). The previous year is simulated first, and the values from 31 December are taken as the starting point for 1 January of the year being simulated. This avoids any shift in the simulation energy balance where the battery reaches a charge condition after simulation that strongly deviates from the start value.

If the system uses a back-up generator the calculation of the correct start condition is not possible.

10.1.1.5 Tab Charge Controller

Because of the large number of different designs, there is no database unit for special charge controllers in PV*SOL®.

On the ”Charge Controller” sheet an entry is made for the battery’s **Lower Discharge Threshold**.

For your information in regard to charge controller sizing, the short circuit current at 1000 W/m² and 50 C module temperature, and the appliances’ maximum electricity use are shown.

10.1.1.6 Tab Back-up Generator

If the use of a back-up generator has been specified on the ”System” sheet, a sheet labelled ”Back-up Generator” appears.

The **Nominal Output** and the **Minimum Power Output** for the back-up generator need to be entered.

The **Fuel Consumption** is required in order to produce a figure for pollutant emissions and for the Economic Efficiency Calculation. The **Maximum Output - Appliances** and the **Total Battery Capacity** are shown for information.

A back-up generator that is required to always cover consumption during any shortfall of solar power must be able to deliver the maximum output required by the appliances (corrected by the battery charger efficiency rate). The generator modulates between minimum and maximum power output. With a single setting generator the minimum power output equals the nominal output.

For the **Battery Charger** you need to enter the AC/DC conversion **Efficiency**, the **Switch-on Threshold** (this should not be less than the battery discharge threshold – see ”Battery Charger”), the **Switch-off Threshold** and the **Switch-on Times** for loading the battery.

The back-up generator ensures a constant power supply to the appliances and that the lower battery discharge threshold is adhered to. If the back-up generator is switched on because the lower battery discharge threshold has been reached, it switches itself off only when the switch-off threshold is reached, provided that the timer is activated.

Because covering the energy load requirement has priority, the battery is also charged if the generator, because of its minimum power output, delivers energy in excess of that required to cover the load.

10.1.2 Technical Data – Grid Connected

System › Technical Data › PV Array / Array I

For grid connected systems you can choose between a system with a central **System Inverter** or a system with an inverter for each Arrayteilgenerator or with series or module inverters, ie with **Multiple Inverters**.

The **System Inverter** is selected on its own sheet in this dialog. If you select a **Multiple Inverter** system you will need to enter the details for the inverters on each sub-array worksheet.

On the other page/s the PV Array or sub-arrays are specified.

In order to check the connection between the modules and inverters, and the influence of losses in the direct current cabling, you should click on the System Check button.

Click on the **System Diagram** button to view the System Diagram, that will later form part of the Summary Report. Each PV array is represented as a PV and an inverter symbol.

10.1.2.1 Tab PV Array – Grid Connected

The PV array is specified on this worksheet.

You are able to give each array a **Reference**.

Click on the **PV Module** button to open the Load File dialog. From here you can select a file from the database.

If your preferred module isn't listed, you will have to go to the **Database** menu and enter the details under PV Module. Then you'll need to go back to the **Technical Data** dialog and select and load your module after clicking on the **PV Module** button.

Exiting the Load File dialog with **OK** enters the parameters into the current project.

On the array sheet/s you also enter the **Number of Modules** . You can also define the number of modules in the **Roof Parameters dialog** from the available Roof Area.

The installed sub-array output and therefore the system output (see PV Output on the "System" worksheet) is calculated from the number of modules.

For the Type of Mount you'll need to choose between **"Free-Standing"**, **"With Ventilation"** and **"Without Ventilation"**. With Free-Standing modules, the required Minimum Distance between module strings is calculated in the **Roof Parameters** dialog, in order to minimise mutual shading.

In order to convert the irradiation onto the horizontal surface, as given in the Climate data files, into irradiation onto the mounted PV surface, you have to enter the Tilt Angle and Orientation.

You are also able to define single or double axis **Tracking** here. With **Single Axis Tracking** the program works with a set inclination while tracking the sun's azimuth angle. With **Dual Axis Tracking** the array is positioned so that the sun's radiation falls vertically onto the array at all times. When the array is in a **Set Position** (ie with no tracking) both the tilt angle and the orientation have to be entered. With **Single Axis Tracking** only the tilt angle has to be entered.

The resulting annual irradiation per square metre, taking shade into account, is shown under **Irradiation**. Click on the **Graph** button to view or print details.

Click on the **Max. Irradiation Inclination** button to find out the tilt angle required for maximum annual irradiation onto the array surface. With grid connected systems functioning under the full supply concept, the optimal inclination corresponds to the **Max. Irradiation Inclination**. The value appears on the button and can be accepted into the entry field. The respective irradiation shown is dependent on this entry.

Click on the **Inverter** button to load one of the available database files from the Inverter database.

If the **Set Fixed Configuration when Selecting Inverter** option is selected, only the inverters that match the number of modules in series are offered for selection in the load inverter file dialog.

If the **Set Fixed Configuration when Selecting Inverter** option is **not** selected, all inverters are offered (in the load inverter file dialog) which match any configuration. After selecting the inverter, a suitable configuration can be selected under **Configuration**.

The **Load Inverter** button is not visible if you have selected the System Inverter concept. In this case you load the inverter parameters from the **System Inverter** sheet. Likewise, the input field **Number of Inverters** only appears when you have selected the Multiple Inverters concept.

If you hold the cursor over either the **PV Module** or **Inverter** buttons an information window appears giving the full data record details for the chosen PV module or inverter.

Configuration per Inverter

After selecting the inverter, you enter the Number of Modules in Series and, if required, the Number of Inverters onto the sub-array sheets. Under **Configuration**, all of the configurations that are technically possible are shown, taking into account the permitted values for current and voltage.

If the **Set Fixed Configuration when Selecting Inverter** option is selected, all of the mathematically possible module configurations per inverter are shown.

If a multi-string inverter with multiple independent MPP trackers is selected, it is possible to enter the configuration for each MPP tracker separately in the **Define Multi-String Configuration** dialog.

For the **DC Cabling** to the inverter, the program calculates the wiring from the PV module string distributor up to the point of entry into the inverter.

Standard **Cable Cross Section** measurements can be selected or you can enter your own measurement.

You can account for general losses from the cabling running from the individual modules to the string distributor in the Technical Data/Calculation Model/Losses dialog.

10.1.2.2 Tab *System › Inverter Concept*

System › Technical Data

The number of modules per inverter is determined by the number of modules divided by the number of inverters.

Because the program only allows a symmetrical connection, the number of modules per inverter must be equal for all the series in an array.

An automatic system check takes place on quitting the dialog with **OK**. The following error dialog could appear:

The number of modules must be a multiple of the number of inverters.

In setting the number of inverters you should ensure that the installed power capacity for the modules and inverters match.

10.1.3 Roof Parameters

System (2d) › *Technical Data › Array › Roof Parameters*

The Roof View window is divided into the following sections:

- Toolbar on top
- Tree view on the left
- Roof visualisation on the right
- Input field below
- Messages at the very bottom

10.1.3.1 Roof View - Toolbar



The toolbar contains the buttons listed below. The current cursor position is also displayed under *Coordinates*, which allows you to find the position of an object point, for example.
The area of the toolbar to the right shows the distance of a selected barred area point or PV area point from the outer borders of the roof area.

Create a New 2D Object

The *Create a New 2D Object* button opens the New 2D Object dialog. Here you can define new roof areas, barred areas or PV areas.

Copy 2D Object
Once you have selected a barred area or a PV area you can copy this to the clipboard by clicking the *Copy 2D Object* button (or pressing CTRL+C). You can then paste the copied barred area or PV area into your roof area by right-clicking and selecting the Paste command (or pressing CTRL+V).

Delete 2D Object
Click the *Delete 2D Object* button (or press the Delete key) to delete selected barred areas, PV areas, modules or module formations.

Delete All PV Areas
Attention! Clicking the *Delete All PV Areas* button deletes all the PV areas.

Delete All 2D Objects (except roof)
Clicking this button deletes all the 2D objects except for the roof area.

Enlarge view
This button enlarges the view of the roof area.

Reduce view
This button reduces the view of the roof area.

Zoom - Select Best View
Clicking this button sets the optimum zoom factor.

10.1.3.2 Tree view

System (2d) › *Technical Data › Array i › Roof Parameters*

The tree view gives you an overview of the 2D objects that are used in your PV system.

Left-click on an element in the tree view to select the 2D object.

Right-click on a 2D object in the tree view to open a context menu with all the available commands for the selected 2D object.

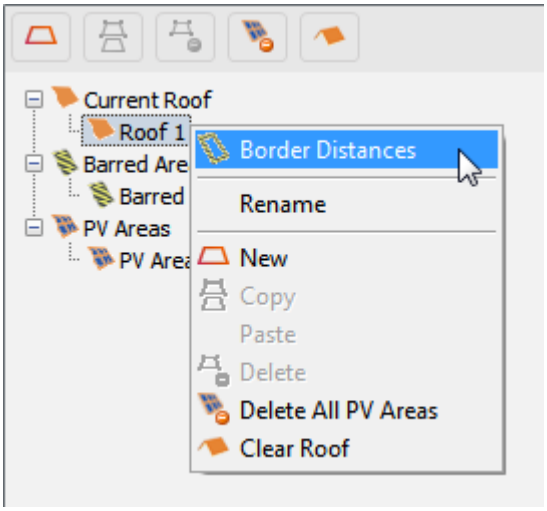

10.1.3.3 Roof Mounting



System › Technical Data › (Generator Output) Determine Output from Roof Area › Roof Parameters › Cover Automatically (context menu on roof visualization)

The *Roof Mounting* visualization shows your current roof project including the PV areas and barred areas.

➔ **Requirements:**

1. In the dialog *Technical Data* in the area *Generator Output* select the option *Determine Output from Roof Area*.

2. Click the button *Roof Parameters*. The dialog *Roof View* opens.

➔ **Proceed as follows:**

1. The roof view is displayed. Define barred areas as new 2D objects and borders.
   - You can drag and drop PV areas and barred areas to move them.
   - If a 2D object is selected, its corner points are shown and can be edited in the input field.
   - The compass rose at the top right of the image is available for projects with mounted PV modules. 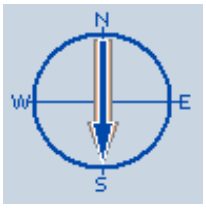

     It shows the direction that the roof faces.
2. Click on the roof area and open the context menu via right-mouse click.
3. Select *Cover automatically* or use *Edit PV Area*.
   The following keyboard shortcuts are available for editing the module formations:

   CTRL + left mouse key:
   Multiple selection

   SHIFT + left mouse key: Row selection

   ALT + left mouse key:
   Column selection

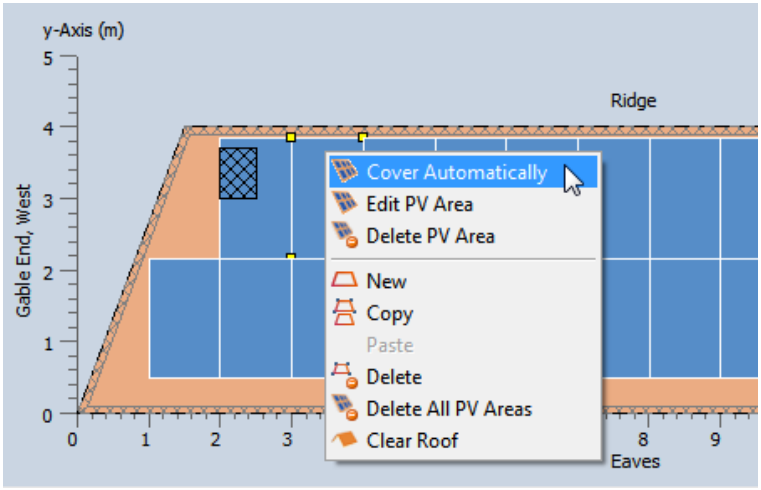

4. Zoom in and out in the roof visualization by rolling the (middle) mouse wheel.

10.1.3.4 Messages

The messages area shows you the following information:

1. Type of installation
2. PV generator power
3. Number of modules

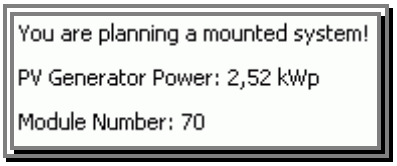

Messages about any conflicts in the roof coverage are also displayed here.

No conflicts exist.

--- No Error ---

A PV area overlaps with a barred area.

Object "Barred Area1" collides with PV area modules "PV Area 1"!

At least one module in a PV area is located outside the roof area.

One or more of the PV area modules "PV Area1" are outside of object "Roof"!

The modules of various PV areas overlap.

One or more of the PV area modules "PV Area1" collide with one or more of the PV area modules "Copy of PV Area1"!

10.1.3.5 Input Field

The appearance of the input field varies depending on the type of object that is selected in the tree view.

When *Roof View* is selected, an overview of the workflow appears:

1. Enter roof dimensions
2. Define barred areas
3. Create new PV area
4. Cover this PV area with modules.
5. Position PV Area

By selecting *Current Roof* you can rename the roof boundaries that appear in the roof visualisation.

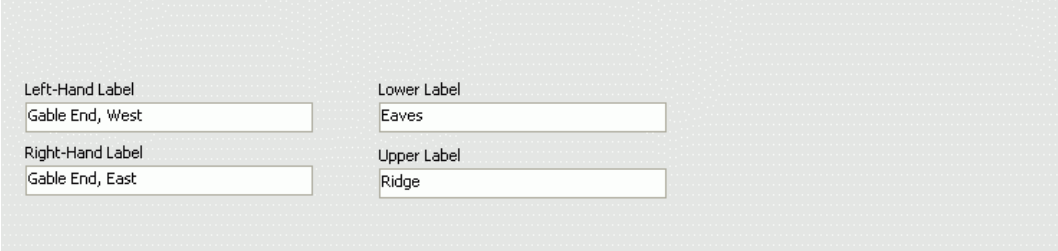

By selecting the roof object (default: *New Roof*) you can edit the coordinates of individual points of the selected object.

You can use the buttons to add or remove points from the selected roof object.

Click the button to open the Edge Distances window.

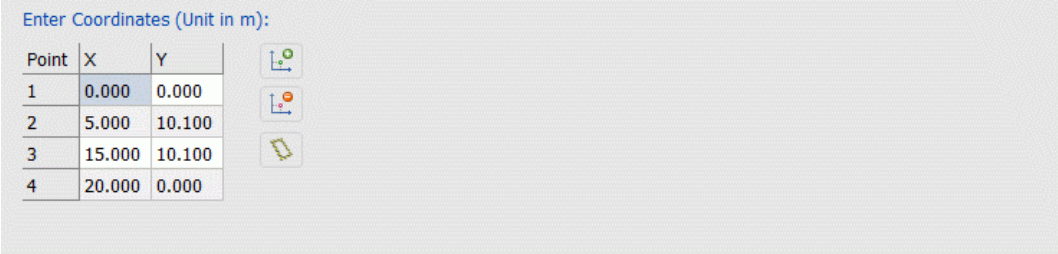

If you are planning a mounted PV system, you can also enter the roof orientation and the roof angle.

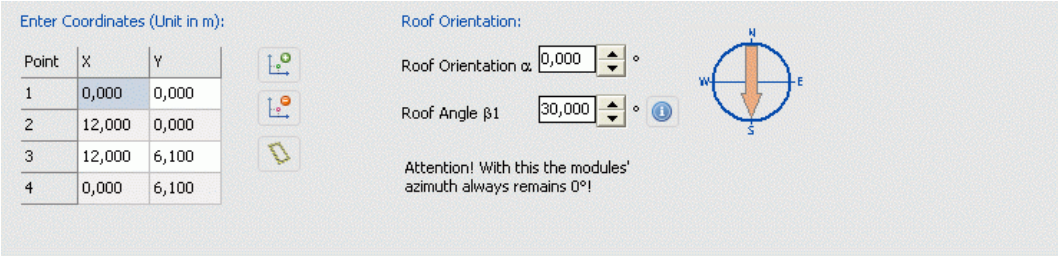

By selecting a barred area object (default: *Barred Area 1*) you can edit the coordinates of individual points of the selected object.
Under *Enter position* you can enter the position of the entire selected object.

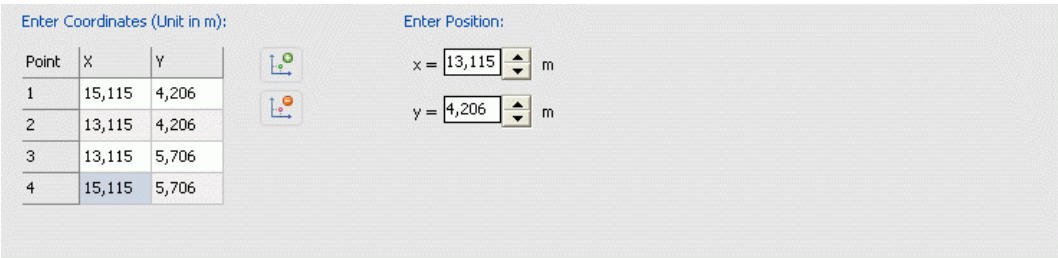

By selecting a PV area object (default: *New PV Area*) you can edit the coordinates of individual points of the selected object.
Click the button to open the Module Coverage dialog.

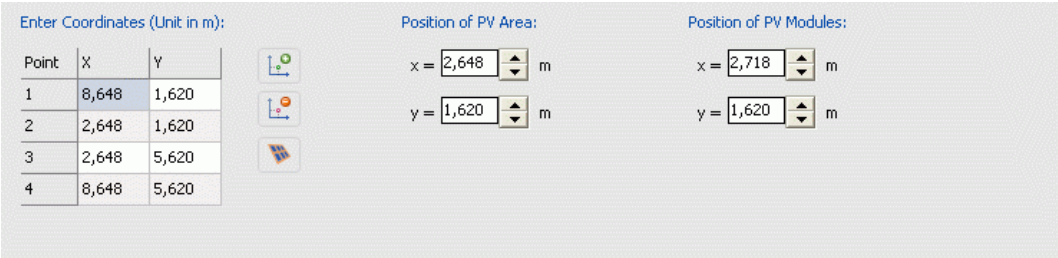

10.1.3.6 Border Distances

System (2D) › *Technical Data* › *Array i* › *(Generator Output) Roof Parameter* › Context Menu (right-click on roof) *Border Distances*

In the *Border Distances* window you can specify barred areas of a certain width for the borders of your roof.

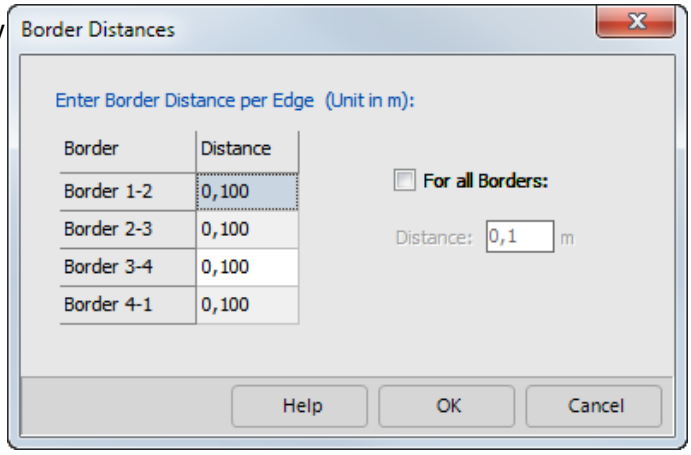

➔ **Proceed as follows:**

1. In the tree view select the roof area.
2. and in the input field click the *Border Distances* button .
3. If you want to define equal border distances for all the boundaries of your roof, then select the option *For all Borders* and enter a number in the edit field on the right-hand side of the window. Otherwise enter individual border distances for each border of the roof in the table on the left side.
4. Close the window with *OK*.

10.1.3.7 New 2D Object

System (2D) › *Technical Data* › *Array i* › *(Generator Output) Roof Parameter* › *New 2D Object*

The *New 2D Object* dialog lets you define new 2D objects for your project.

➔ **Proceed as follows:**

1. Click the button . The dialog "*New 2D Object*" opens.
2. First, select the object type in the drop-down menu at the top left: *Roof Area*, *Barred Area* or *PV Area*.
3. Then enter a *reference* name for your new 2D object.
4. Depending on the selected object type, different standard forms and options are available for defining the new 2D object:

New Roof Area

System (2D) › *Technical Data* › *Array i* › *(Generator Output) Roof Parameter* › *New 2D Object* › *Roof Area*

➔ **Proceed as follows:**

1. Enter a *reference* name for your new 2D object.
2. Open the window Border Distances where you can specify barred areas for the borders of your roof.
3. Select on of the geometric *standard forms*:

Rectangle 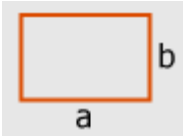

Trapezium 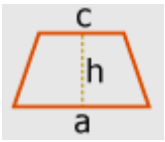

Triangle 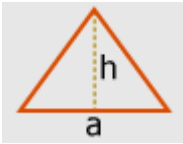

4. Enter the form sizes.
5. For simple roof areas without barred areas and border distances:
   Tick the ☑ *Cover roof to maximum* box to give the new roof area a PV area the same size as your roof.
   PV modules will then be added automatically when you click on *OK*.
6. If needed, repeat the same procedure for Barred areas and the PV area.
7. Close the dialog using *OK*.
   The roof is visualized accordingly.

New Barred Area

System (2D) › Technical Data › Array i › (Generator Output) Roof Parameter › New 2D Object › Barred Area

➔ **Requirement:**

You have defined the roof area.

➔ **Proceed as follows:**

1. Enter a *reference* name for your new barred area.
2. Select one of the geometric *standard forms*:

Rectangle

Trapezium 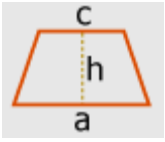

Triangle 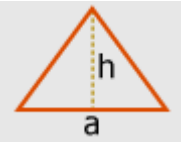

Circle

3. Enter the form sizes.
4. Repeat this for PV areas accordingly.
5. Close the dialog using *OK*.
   The roof is visualized accordingly.

New PV Area

System (2D) › Technical Data › Array i › (Generator Output) Roof Parameter › New 2D Object › PV Area

➔ **Requirement:**

1. You have defined the *roof area*.
2. You have defined necessary *barred areas*.

➔ **Proceed as follows:**

1. Enter a *reference* name for your new PV area.
2. Select one of the geometric *standard forms*:

Rectangle 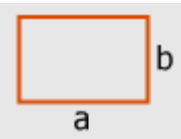

Trapezium 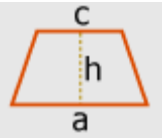

Triangle 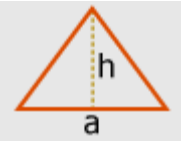

3. Enter the form sizes.

4. Or, if needed select the option "*Fit to roof area*"

The new PV area takes the shape and dimensions of the existing roof area.

5. Or, select the option "*Based on number of modules*":
   The size of the new PV area is determined for a specified module formation.
   - Enter the number of rows and columns in the planned module formation.
   - The resulting power of the module formation is displayed.

6. Tick the *Cover roof afterwards* box to add PV modules to the new array area automatically after you click on *OK*.

7. Close the dialog using *OK*.
   The roof is visualized accordingly.

10.1.3.8 Module Coverage

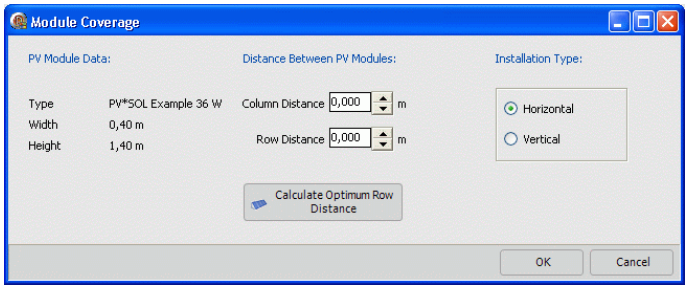

To open the *Module Coverage* dialog: In the tree view, select a PV area and click in the input field on the *Edit coverage* button .

The *Module Coverage* dialog lets you specify the column distances and the row distances for the PV modules. The minimum distance for both values is 0.05 m = 5 cm.

Under *Installation type* you can specify the module orientation (horizontal or vertical).

Calculate the Optimum Row Distance

For mounted PV systems (Installation type: Free-Standing) you can calculate the optimum row distance. This minimises mutual shading between rows of mounted modules.

The suggested clearance is a function of module inclination β, position of sun γ on 21.12. at 12.00 p.m. and the mounting height h of the module.

To open the *Row Distance* dialog, open the Module Coverage dialog and click on *Calculate Optimum Row Distance*.

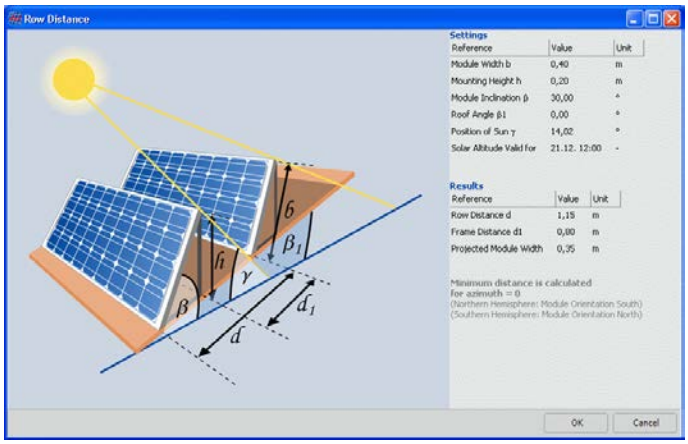

10.1.4 Workflow

Example for a PV system with ventilation.

1. Specify the installation type: In the *Technical Data*: Array window select *With Ventilation* as the desired installation type.
2. Now select *Determine Output from Roof Area* and then click the *Roof Parameters* button.
3. Specify the size of your roof area. To do this, select the roof area by left-clicking on the roof area in the roof visualisation or select your roof area in the tree view (default: New Roof). You can now specify the size and shape of your roof in the input field.
4. First of all, delete all 2D objects by clicking the *Delete All 2D Objects (except roof)* button . Alternatively you can delete particular 2D objects by clicking the button, for example to obtain a barred area that you require.
5. Specify the barred areas for the borders of your roof area. To do this, select the roof area by clicking on the roof area in the roof visualisation or select your roof area in the tree view (default: New Roof).

   Now in the input field click on the button and define the required barred areas in the Edge Distances dialog.
6. Now create a new barred area (e.g. skylights and chimney). Your roof might look something like this:

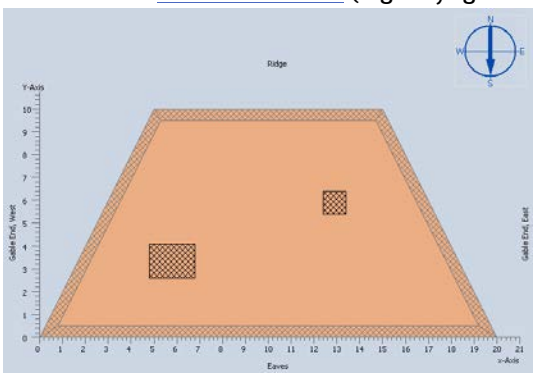

7. To define a PV area that is matched to the roof area, click the *Create a New 2D Object* button to open the New 2D Object dialog.
8. Select *PV Area* in the drop-down menu at the top left.
9. Select the *Fit to roof area* option for the new PV area.
10. Now tick the *Cover roof afterwards* checkbox.
11. Click *OK* and PV modules will automatically be added to the roof area. Now your roof might look something like this:

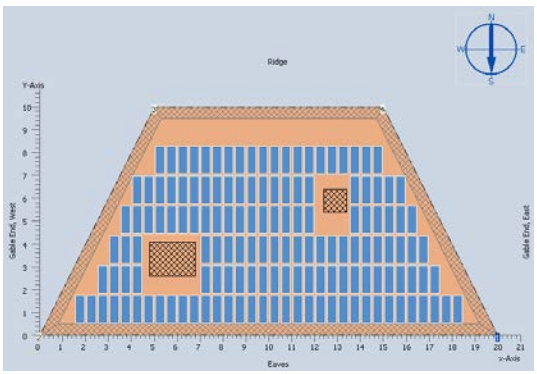

12. Now you can specify the installation type (horizontal or vertical) and the distances between the PV modules in the Module Coverage dialog.

10.1.5 Photo Plan

System › Technical Data › PV Array / Array i › Photo Plan

Using Photo Plan, you can create a photorealistic plan of your roof areas. With just a few entries on the geometry of the roof, it is possible to gain an impression of the future look of the roof areas. You require only a photo of the roof.

In addition, Velux® skylights and Braas® roof tiles can be included and displayed.

Before

After

10.1.6 Orientation

System › Technical Data › PV Array / Array i › Orientation

The **Inclination** (Tilt Angle) represents the angle between the horizontal and the collector surface. It is 0° when the module is laying flat on the ground and 90° when standing upright.

The **Orientation** (Azimuth) represents the angle of deviation of the PV surface from the south in the northern hemisphere and from the north in the southern hemisphere. It is 0° when the surface is facing towards the sun's highest point (zenith).

PV*SOL recognizes from the climate data, which contains the degree of latitude, whether the system is located in the northern or southern hemisphere.

The azimuth is positive when facing west and negative when facing east. An orientation due west corresponds to a value of +90° and an orientation due east is -90°.

From the inclination and orientation the radiation processor calculates the irradiation onto the tilted surface. Click on the **Graph** button to view the annual irradiation fluctuations [kWh/m²] and the annual radiation duration curve [W/m²].

10.1.7 Installation Type

System › Technical Data › PV Array / Array i › Installation Type

The installation type influences the heating of the PV modules.

With a **"Free-Standing"** mount the entire module surface (front and back) exchanges radiation with its environment.

For a roof-top mount **"With Ventilation"** only the upper module surface is available for radiation exchange, and for roof-top or façade integration **"Without Ventilation"** this is reduced further. With roof or building integration the output is reduced further by a lack of convection.

High module temperature leads to a drop in module efficiency. Yields for PV systems with free-standing mounting are therefore higher than those for systems with ventilation space which in turn have higher yields than systems without ventilation space.

10.1.8 Losses

System › Technical Data › Losses

The array's power output (DC side) is, along with the STC efficiency and the calculated output, determined by the part load operation, the output's temperature dependency (see output coefficient in the PV Module dialog) and the additional losses.

Losses occur during real system operation:

- due to deviation from the standard spectrum AM 1.5,
- due to mismatch or lesser yield due to deviation from the manufacturer's data
- in the diodes, and
- due to pollution.
- Deviation from Standard Spectrum AM 1.5:

Spectral mismatch changes the module's characteristic curve, which is measured against a standard spectrum. In Central Europe a correction factor of an annual average of 2% can be allowed for. The correction factor should be entered in the field provided.

Mismatch or Lesser Yield Due to Deviation from Manufacturer's Data:

Despite equal irradiation and temperature, different MPPs (mismatching) can occur because of production tolerances, or because the modules do not reach their full power as stated by the manufacturer (lesser yield). These kind of power losses can reach 1-5%. (This does not mean the "mismatch effect" that occurs if differently aligned modules, ie a number of sub-arrays, are connected to a single system inverter. These losses are defined during simulation.)

Diodes: Losses caused by a drop in voltage by the modules' blocking diodes can usually be ignored.

Pollution: Over a certain tilt angle (approx. 20%) losses caused by pollution can be ignored.

Ground Reflection (albedo) is evaluated in the radiation processor. PV array irradiation is increased by the reflection of radiation on the ground or in the surrounding area. With a ground covering of snow the albedo is 80%, under normal conditions the albedo is 20%.

Allowing for Manufacturer Tolerances in Pre-Graded Sub-Arrays

If the module output (power rating) deviates from that specified by the manufacturer, you are able to take this into account here. This, for example, makes sense when you have pre-sorted the modules according to power output.

From the **System Height** above ground level it is possible to determine the scalar wind at system height for the dynamic Temperature Model. The wind in the climate data is measured at a height of 10 meters.

10.1.9 System Diagram

System › Technical Data › *System Diagram*

The System Diagram is a colored sketch of the system. This will later form part of the Summary Report.

System components such as arrays, inverters, batteries, and also the consumption as well as the grid concept are illustrated as symbols. Important details, such as the number and type of modules or inverters, are also shown.

The System Diagram is a sketch. It cannot be edited and does *not* represent a full technical drawing of the system.

10.2 Shade

➔ **Precondition: Planning a 2D system**

➔ **Proceed as follows:**

1. Enter of the shade parameters in the program is in two stages. You are able to define the horizon and middle-distance objects (see Shade from Individual Object).

The Azimuth angle is the deviation from south, as in the "*Technical Data*" dialog. Due east is entered as -90° and due west as +90°.

Middle-distance objects means objects that need to be taken into account in the calculation, because the PV array is fully shaded by these objects at certain times of the day.

The entries for shading from the horizon and middle-distance objects reduces the irradiation onto the array surface, and a correction factor enables the program to simulate the shade moving over the array.

The program allows a sketch of the horizon parameters to be made using the mouse. Values are given at the bottom of the window, as is the following message:

To start the sketch click on New Sketch or click on the horizon line with the left mouse button.

New Sketch

Adding a vertical to the existing horizon line can be difficult. This is better done by entering an individual object. Click on **Object List** to open the Shade from Individual Object dialog.

You can make a new sketch of the horizon at any time.

Another method is to enter the horizon parameters into the Table.

If you have a system with a number of arrays not only is each of these given its own page in the **Shade** dialog, but there is also a button labelled **All Arrays**.

Click on **All Arrays** and the parameters for the horizon currently on screen are adopted for all of the sub-arrays. The individual objects are, however, not adopted.

Save the shade parameters to file or load an existing file in order to use horizon or individual object parameters again.

10.2.1 Coordinates Table

Another method of entering the horizon is to enter the values into the horizon coordinates table. The start and end points are already entered, as are any coordinates you have drawn with the mouse in the sketch.

Any new points are added to the table in consecutive order. Click on **New Point** to define a point and on **Add Point** to add the values to both the table and the sketch.

Any points in the table can be deleted by first clicking on them (so that they are highlighted in blue) and then clicking on the **Delete Point** button.

10.2.2 New Sketch

Click on the **New Sketch** button and the cursor is represented as a pencil symbol. As soon as you move the cursor over the sketch area a line is drawn between the starting point and the cursor position. The actual cursor position is shown at the top of the dialog.

The position of the line is accepted by clicking on the desired end position within the sketch area. The horizon sketch is always drawn from left to right. If you move left of a starting point the cursor changes into a warning hand and a line is no longer drawn.

If you want to interrupt the sketch click with the right mouse button. This message also appears at the bottom of the dialog:

Click with right mouse button to end sketch.

If you want to rework any lines you have drawn, you can only do this after the current sketch is complete, as per the message given at the bottom of the sketch:

To rework the horizon click on the horizon line with the left mouse button.

10.2.3 Shade Caused by Individual Objects

In addition to shade from the horizon (see also section on Shade) the program also allows definition of individual objects that shade an array.

The objects already defined are found in the **List of All Objects**. From the left hand side of the window you can select the object whose value you wish to see or change. If no object has been defined, the list is empty.

Next to the object reference in the top right of the window, a corresponding illustration of the type of object, tree or house, appears when a selection is made.

If you want to define a new object click on **New House** or **New Tree**, according to the type of object causing the shade. A new object (eg with the reference No. 1) is created and the standard values appear on the right of the window.

The difference between a tree and house is the extent to which the object allows light through. On selecting a new tree the **Seasonal Shade** button is activated and you are able to enter a percentage figure for each month of the year. In summer the shade from the leaves of a tree will be 90%, in winter this figure will be more like 40%.

Objects can be deleted from the list by highlighting the object in the list and then clicking on the **Delete Object** button.

The specifications from which objects in the vicinity can be defined are: height, width, distance and azimuth.

The point of measurement for setting these dimensions is the middle point of the array surface, facing south. Therefore an azimuth of o° means that the object is positioned to the south, independent from the PV array's actual azimuth.

The elevation angle is defined from the specification of the height and distance. Width and azimuth represent the object's angle coordinates.

The calculated dimensions (fields with grey background) are first calculated on leaving the object, and the values are updated when the values are loaded again.

11 Calculations Menu

If the system parameters have been defined and climate data has been selected, the program is able to carry out a simulation of energy yields. After that an economic efficiency calculation is possible, once you have entered tariffs for energy supply to and from the grid.

The **Simulation** command cannot be accessed (the lettering is grey not black) when valid results are available (ie a simulation has already been carried out and the parameters remain unchanged). The **Economic Efficiency Calculation** command cannot be accessed when there are no valid simulation results available.

11.1 Quick Design

Quick Design allows a full system simulation to be carried out.

➔ **Start the Quick Design by using *File › New Project › Start new project with Quick Design › OK***

In addition to the entry parameters within the Quick Design dialog, all other quantities are provided by the program as standard values.

After simulation you are given a Summary Report. The Summary Report can be printed out on one side of A4 paper.

If you want to change the values entered in the Quick Design window and repeat the simulation, click on **‹‹ Back**. Otherwise quit preview with **OK** and you can work on the project from the program and then run a new simulation.

11.2 Simulation

Starts simulation of the current project with the given parameters. The system is simulated at hourly intervals over a year.

The basis for the calculations can be found in the program user manual.

The simulation only takes a few seconds, although the exact time depends on the computer being used, the number of arrays in a system and the type of temperature model selected.

After simulation you can select whether you want to run the Economic Efficiency Calculation, or view the Annual Energy Balance, the Summary Project Report, or the Graph of Results.

You are also able to go back to the program's main screen and continue work on your project using the menu bar or speed buttons.

All results are now activated in the Results menu and can be viewed. As long as the project parameters remain unchanged you are not able to carry out the **Calculations**/**Simulation** command.

11.3 Economic Efficiency Calculation

After simulation it is possible to carry out an **Economic Efficiency Calculation**.

The **Economic Efficiency Calculation** follows the net present value method.

The entry dialogs and the dimensions calculated are different for stand-alone and grid connected systems.

11.3.1 Economic Efficiency Calculation – Grid Connected Systems

You are able to move through the **Economic Efficiency Calculation** in two ways. With the **Continue** and **Back** buttons at the bottom of the window, you can go to the next or the previous page. With the left-hand **Navigation Bar** you can jump straight to the required page.

Every window contains a **Help** button (in the top right corner) which gives help in respect of the required entry parameters.

11.3.1.1 Technical Input

(grid-connected system) *Calculation › Economic Efficiency Calculation › Technical Input*

This dialog shows the basic parameters in PV*SOL which are relevant for the Economic Efficiency Calculation.

➔ **How to proceed in Germany:**

1. *Economic Efficiency Variant*: Name your system.
2. *Start Date*: Enter the system operation start date, it is required for the proportionate allowance for lodgements and disbursements made in the first year.
3. If you let the option ☐ *British / Italian Feed-in Tariff*, empty, then the German EEG is used for calculations.
   The following technical data are displayed:
   - Peak PV power,
   - PV electricity generated in first year,
   - Conserved electricity (in first year)
   - Electricity to grid (in first year)
4. Enter the *percentage of the PV electricity legally compensated*. (EEG 2012: in Germany: 80%; other countries (until further notice): 100%)
   The corresponding data are calculated and displayed:
   - Maximum compensated electricity fed into the grid
   - unpaid electricity fed into the grid

5. Calculate savings: Choose either:
   Calculate Savings from Reference Tariff, then you can *load* a Household Tariff. The corresponding saving is displayed in €/kWh, or
   Set Predetermined Savings, then you enter a value in €/kWh.
6. Calculate payment: Choose either:
   Calculate Payment from Feed-in Tariff, then you can *load* a Feed-in Tariff. The corresponding payment is displayed in €/kWh, or
   Set Feed-in Payment, then you enter a value in €/kWh.
7. *Market value of unpaid electricity fed into the grid*: Enter the payment you can achieve. (No legal regulation)
8. Continue to the next page to set the *General Parameters* or *Close* the economic efficiency calculation.

➔ **How to proceed in Great Britain or Italy:**

1. *Economic Efficiency Variant*: Name your system.
2. *Start Date*: Enter the system operation start date, it is required for the proportionate allowance for lodgements and disbursements made in the first year.
3. Select the option *British / Italian Feed-in Tariff*.
   The following technical data are displayed:
   - Peak PV power,
   - PV electricity generated in first year,
   - conserved electricity (in first year)
   - Electricity to grid (in first year)
4. Enter the following data:
   - Period of validity for Tariff
   - Income from Export to Utility Grid with inflation
   - Outgoing Cost of Energy from Utility Grid with inflation
   - Income from PV generation with inflation
5. Continue to the next page to set the *General Parameters* or *Close* the economic efficiency calculation.

Glossary

Peak PV Power:
The output of the system defined in PV*SOL under Standard Test Conditions.

(STC: 25°C module temperature, sunlight spectrum of AM 1.5 and 1000 W/m² irradiation.)

PV Electricity Supplied to Grid in First Year:
This specifies the amount of electricity fed into the grid in a whole year. The month that the system started operation and degradation are not allowed for here.

Electricity Costs Saved in First Year:
This specifies the cost saving made on electricity drawn from the grid in a whole year. The month that the system started operation and degradation are not allowed for here.

Use Tariff to Calculate Income from PV Generation:
For the **Payment Received for Grid Supply** the following rule applies: the amount shown is paid, for example, for 20 full years plus the months in the first year of operation.

11.3.1.2 From Grid Tariff

The tariff for electricity from the utility grid used by the electrical appliances is defined here. For more information on how to use the database see: Project Design.

From the Load and Save File dialog and you are able to load a tariff file from the database or save a tariff file to the database [*.tar].

The tariff reference is given in the field labelled **Name**.

High Tariff and Special Tariff Periods are defined in the Tariff Time Periods dialog. These times are valid for electricity drawn from the grid as well as for energy exported to the grid.

The kilowatt-hour prices for each tariff time period (ie HT – high tariff, LT – low tariff and ST – special tariff) are entered in the Kilowatt-Hour Price dialog.

Click on the Power Measurement button to define the type of power measurement (¼ hour power measurement, 96 hour measurement) In addition, the prices for the energy provided by the grid utility is defined here and the light or heavy load periods are entered.

The grid utility discounts and supplements can be entered separately in the Discounts and Supplements dialog.

11.3.1.3 To Grid Tariff

Unlike the other database files, the **To Grid Tariff** can be selected and defined in both the **Conditions/Tariffs** menu dialog and in the Economic Efficiency Calculation... dialog. However, you can also define the To Grid Tariff via the **Databases** menu in the main menu bar.

A reference describing the data record can be entered in the upper text field.

Period of Validity for Tariff
For the first years, the **To Grid Tariff** is usually set at a higher rate. Thus you can take account of any subsidised electricity provided for a set period, following which the legally set minimum rate is paid.

To Grid Tariff after ... Years
Here you are able to define a different To Grid Tariff which is received following the initial period.

Number of Power Levels
Here you can set the number of **Power Levels** required to define the different **To Grid Tariffs**.

Tariff Zones/Graduated Tariff Rates
The method used for calculating the resulting **Payment Received for Grid Supply** varies according to the selection of either **Tariff Zones** or **Graduated Tariff Rates**. If Tariff Zones is selected, the result is an almost constant change in the payment, whereas the selection of Graduated Tariff Rates produces a jump from one payment rate to the next when the defined Power Level is reached.

Tariff Zones:

A mean **To Grid Tariff** for all **Power Levels** up to the **Installed PV Power** is calculated. For example:

0-30 kW - €1

From 30 kW - €0,50

A system size of 50 kW therefore produces a Payment Received for Grid Supply of 30/50*€1 + 20/50*€0,50 = €0,80.per kWh.

Graduated Tariff Rates:

In this case the To Grid Tariff is calculated direct from the Installed Power. Using the above example, this would result in a Payment Received for Grid Supply of €0.50 per kWh on all electricity supplied.

Payment Received for Grid Supply – High Tariff/Low Tariff different

If this option is selected, an additional field appears in which you can enter the **To Grid Tariff** at two different rates: a **High Tariff** and a **Low Tariff**.

The timings for High and Low Tariffs are the same as those for the **From Grid Tariff**. The timings are therefore dependent on the From Grid Tariff.

11.3.1.4 Basic Parameters

Assessment Period:

Only complete years, not including the year in which the system starts operation, should be entered for the **Assessment Period**.

According to German standard VDI 6025, the Assessment Period is the time period of planning base for the calculation of economic efficiency (planning horizon).

The Assessment Period should be based on the investment with the shortest **Service Life**.

If the Service Life of an investment is less than the Assessment Period, the investment will have to be repurchased.

If the Service Life of an investment is greater than the Assessment Period, the investment will have a residual value at the end of the Assessment Period, which is included in the capital value calculation.

Interest on Capital:

The Interest on Capital can be entered as the Rotating Internal Rate of Return. The Rotating Internal Rate of Return is the average yield from fixed interest bonds. The German Federal Bank determines this from the average yields on outstanding debt securities. The Rotating Internal Rate of Return is therefore a measure of the interest level on the bond market.

Value Added Sales Tax

This entry field does not influence the calculation, but is there to make clear that all amounts should be entered either with or without sales tax. As a rule, all amounts should be entered as net sums. However, if you enter a gross amount, you should make sure that all entries are gross.

11.3.1.5 Define Output Losses

Calculation › Economic Efficiency Calculation › Technical Input › System output reduction due to age (degradation)

Here you are able to define power loss in the PV modules caused by ageing.

Enter the annual **Output Losses** as a percentage of the nominal output (power rating). In the **Remaining Output** column you will then see the resulting output as a percentage of the nominal output. The **Output Losses** defined first take effect at the end of a period, ie losses for the first year first come into effect in the second year, etc. After 10 years, the power output of the PV module remains constant.

If you wish to allow for deviation in the first year of the PV modules' actual output from the nominal output, then enter this figure in the field labelled **Deviation of Module Output from Nominal Output**.

11.3.1.6 Income and Expenditure

On the **Balance of Costs** page you are able to enter all payments divided into cost groups.

The program recognizes the following cost groups:

- Tax deductable investments
- Non-tax deductible outgoing cost of system setup parts and labor
- Incoming subsidies
- Outgoing annual operating costs
- Consumption costs
- Outgoing other annual costs
- Incoming other income/savings

If you want to enter a number of positions within a cost group, select the **Detailed Entry** for the cost group. This will automatically take you to the corresponding page, where you can enter as many positions for the cost group as you wish.

If you have selected the Detailed Entry on the Balance of Costs page, the field text is grey and the total of payments for the cost group is shown.

For each cost group you can choose to make absolute or specific entries, but this option is not available if the Detailed Entry selection has been made.

11.3.1.7 Investment Costs

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

The **Inflation** indicates the average percentage change of a payment in comparison with the previous year.

The **Service Life** is the time period measured in years of the economic use of an investment object.

If the Service Life of an investment is less than the Assessment Period, the investment will have to be repurchased.

The price of repurchase is based on the **Price Change Factor** given.

If the Service Life of an investment is greater than the Assessment Period, the investment will have a residual value at the end of the Assessment Period, which is included in the net present value calculation.

11.3.1.8 Non-tax deductible Outgoing cost of system setup parts and labor

On this page you can define **Non-tax deductible Outgoing cost of system setup parts and labor**, arising at the time the system starts operation, and **Savings**.

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

One-off Payments are (unlike investments) costs which cannot be written-off against tax. They are taxed directly.

11.3.1.9 Other Costs

On this page you are able to define any **Other Annual Costs**. .

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

The **Inflation** indicates the average percentage change of a payment in comparison with the previous year.

11.3.1.10 Operating Costs

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

The **Inflation** indicates the average percentage change of a payment in comparison with the previous year.

11.3.1.11 Consumption Costs

Here you can define the Consumption Costs.

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

The **Inflation** indicates the average percentage change of a payment in comparison with the previous year.

11.3.1.12 Subsidies

On this page you can define one-off **Subsidies** received at the start of system operation.

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

Subsidies reduce the costs. They do not influence tax depreciation, but are taxed directly.

11.3.1.13 Loans

Number of Loans

Here you can enter the number of loans that you want to define. You can account for 0-3 loans.

Reference

Here you can give the loan a name, which will then appear in the Project Report.

Loan Capital

The amount of credit, with the calculation based on interest and repayment. The loan amount can be entered as an absolute figure in euros or as a percentage of the investment volume. **Investment Volume** is understood here as the investments plus one-off payments less subsidies.

Payment Instalment as a percentage of the loan capital (**Discount**)

This value specifies which percentage amount of the loan capital entered is actually paid.

The loan amount paid is based on the loan capital multiplied by the disbursement rate.

The **Total Disbursements** for all loans should not be greater than the Investment Volume defined above.

You will also need to define whether the loan is an **Instalment Loan** or an **Annuity Loan**.

Instalment Loan
With this kind of loan, repayments are made in equal instalments. The amount of interest to be paid is recalculated after each instalment from the remaining amount of debt. The total repayment amount is calculated from repayments which remain constant and interest on an amount which reduces over the period.

Annuity Loan
With this kind of loan, repayments are made in equal instalments over the repayment period. The loan repayment amount as a percentage of the instalment increases with the number of instalments, while the interest percentage sinks correspondingly.

Period
The loan-repayment period.

Loan Interest
Nominal Interest Rate to be paid on the remaining debt.

Repayment-Free Initial Years
During this period no repayments, but only interest payments are made. In the remaining time up to the end of the period, the loan capital is repaid in instalments.

Repayment Interval
Interest and instalments are paid at these intervals.

.

11.3.1.14 Tax

In order for tax payments to be included in the **Economic Efficiency Calculation**, you will need to select the **Allow for Tax** field.

It is usually the case that with a profitable investment the inclusion of tax payments has a negative impact on the results. The results only improve with changing tax rates. A change in tax rate is possible, for example, if the investor retires after 10 years. If, at the time that the system starts to enter the profit zone, the investor is making losses on other investments, the tax rate could also be set at zero.

Marginal Tax Rate for Income/Corporation Tax:
This is the tax rate that needs to be paid for each additional taxable Euro. The amount should also appear in your tax assessment.

If Allow for Change in Marginal Tax Rate is selected, the New Tax Rate given in Change of Tax Rate comes into the calculation.

Depreciation Period:
The period over which the investment can be written-off against tax. The usual period for photovoltaic systems is 20 years.

Depreciation Type:

Linear (straight line):
Annual depreciation is calculated from the investment amount divided by the depreciation period.

Degressive (reducing balance):
Annual depreciation is not constant, but is calculated as follows:

Investments that have not yet been depreciated are multiplied with the rate of depreciation. This leads to a year by year decrease in the annual depreciation. If the annual depreciation sinks below the value that is obtained through linear depreciation, the residual value is calculated as linear depreciation for the remaining period.

11.3.1.15 Results

The basic Results of the Economic Efficiency Calculation are shown here.

Exactly which Results are shown depends on the amount of self-financing being made towards the total investment.

The Results shown here also appear in the **Project Report**.

The system's **Net Present Value** and the **Electricity Production Costs** are always calculated.

The **Payback Period** and the **Net Yield** are related to the amount of self-financing used. Therefore these Results can only be calculated when the amount of self-financing is greater than zero. If the investment is partly financed by borrowed capital, the program calculates a **Minimum System Operating Period**, following which the amount of self-financing used and the loan payments have been recouped.

If the Minimum System Operating Period is greater than the Payback Period, the Minimum System Operating Period is given.

Exactly which graph is shown depends on whether the Payback Period or the Minimum System Operating Period is given.

If the Payback Period is given, the **Cash Balance (Accrued Cash Flow)** graph is shown.

If the Minimum System Operating Period is given, the **Cash Balance less Outstanding Loans** graph is shown.

11.3.1.16 Graphics

You are able to select whether and how interest is calculated on the Payment Sequences:

Discount Payments (Cash Value)
The reference point for this method of observation is the time before the start of the **Assessment Period**. The discounted interest on all payments is calculated at this point. The results of the Economic Efficiency Calculation form the basis of this type of assessment (Capital Value, Payback Period, Internal Rate of Return, Electricity Production Costs).

Interest on Payments
The reference point for this method of observation is the end of the **Assessment Period**. It can be interpreted as the balance of account.
For a payment, eg of €1000 in the first year, interest is calculated at n-times capital interest up to the end of the Assessment Period, for a payment in the second year, at n-1-times.

No Interest on Payments
A payment of, for example, €1000 in the first year has the same value as a payment of €1000 after 20 years. This gives a clear view, but is not suitable for making economic decisions.

You can display 2 curves via the selection fields. If you only want to see one curve, you should select ‹no curves› in the 2nd Curve field.

Print Graphic
The graphic displayed can be viewed via the Print Preview before printing. The page is fixed to print in horizontal format.

Copy Graphic
The graphic displayed can also be copied to the clipboard, for example if you want to add it to your project report in Microsoft Word. You would have to export the project report into Microsoft Word first – this is done via the Print Preview.

For information on compiling the results, see also Results Overview

11.3.1.17 Tables
You are able to select whether and how interest is calculated on the Payment Sequences:

Value of Payment Sequences (Cash Value)
The reference point for this method of observation is the time before the start of the **Assessment Period**. The discounted interest on all payments is calculated at this point. The results of the Economic Efficiency Calculation form the basis of this type of assessment (Net Present Value, Payback Period, Net Yield, Electricity Production Costs).

Pay Interest on Payment Sequences
The reference point for this method of observation is the end of the **Assessment Period**. It can be interpreted as the balance of account.
For a payment, eg of €1000 in the first year, interest is calculated at n-times capital interest up to the end of the Assessment Period, for a payment in the second year, at n-1-times.

Do Not Pay Interest on Payment Sequences
A payment of, for example, €1000 in the first year has the same value as a payment of €1000 after 20 years. This gives a clear view, but is not suitable for making economic decisions.

In the table's second column, the total payments over the Assessment Period are shown. No totals are shown for the Payment Sequences that have already been accrued. In respect of the Investment Costs, the Residual Value of the investment at the end of the Assessment Period is given in the final column.

Copy Table
The table displayed can also be copied to the clipboard, for example if you want to calculate your own results or to create your own graphics from within a spreadsheet program.

For information on compiling the results, see also Results Overview

11.3.1.18 Report
Here you are able to select the items that will appear in the **Project Report**.

The **Results Overview** gives details of the actual results, and this should always be printed out.

In addition, you can print a **Detailed List of Income/Expenditure**. This shows all the entries specified under the headings **Balance of Costs** and **Loans**.

You can also select which graphics you would like to appear in the report.

Click on **Print Preview** to take a look at the pages included in the report. From here you can print the report and create a PDF file. You can also export to Microsoft Word or other word processing programs that accept documents in RTF format. You are then able to change the report layout, for example.

11.3.2 Economic Efficiency Calculation – Stand-Alone Systems

First of all you need to enter the parameters required for the Economic Efficiency Calculation. This is done on four different sheets:

Once all the parameters have been entered you can view and print the results by clicking on the Economic Efficiency Calculation button.

11.3.2.1 Stand-Alone Systems: Basic Parameters

The following parameters are entered on this page:

Capital Interest Rate

This is the interest on capital borrowed from the bank for the PV investment or the interest that could be charged on the capital used.

Price Increase Rates

Changes to running costs and fuel costs (if a back-up generator is to be used) are important for calculating the cash value of the system. Increase rates for electronics, batteries and the back-up generator can also be included.

Lifespan

The period given by the manufacturer as the expected lifespan of the system. For PV systems this is usually set between 10 and 25 years. The program allows various lifespan periods to be entered for electronics, batteries and the back-up generator.

11.3.2.2 Stand-Alone Systems: PV Costs, Breakdown of Costs

The following parameters for the PV system costs are entered on this page:

Investment

The investment can be given as an absolute amount or as a specific cost in €/kWp.

Subsidy

The subsidy can be given as an absolute sum, as a percentage of the investment or as a specific subsidy in €/kWp.

Running costs

The running costs can be given as an annual amount or as a percentage of the investment in percent per annum.

Component Cost Allocation

On this sheet the PV system costs can be split between its components: PV modules, electronics and batteries.

11.3.2.3 Stand-Alone Systems: Back-up Generator

If a back-up generator is to be used, the costs are entered on a separate page.

Investment

The investment can be given as an absolute amount or as a specific cost in €/kW.

Running Costs

The running costs can be given as an annual amount or as a percentage of the investment in percent per annum.

Specific Fuel Costs

Fuel costs are entered as an amount per litre. The annual fuel requirement is shown after simulation.

11.3.2.4 Stand-Alone Systems: Financing

Details on financing are entered on this page.

A loan can be loaded from the Database via the selection list or the folder button.

Loan capital

The amount of credit in € that is arranged.

Term

The time period that has been arranged for paying back the loan.

You also have to enter the **Annual Instalment** or the **Loan Interest**. In either case the other input field cannot be accessed and is calculated by the program.

Annual Instalment

The set annual instalment which pays back the loan and interest within the credit term.

Loan Interest

The amount of interest that has to be paid on a loan.

If the loan interest rate is lower than the capital interest rate taking out a loan works like a subsidy, if the rate is higher the total costs increase. When interest rates are equal there is no difference.

11.3.3 Payback Period

The period required to get to the point when the net present value of the investment first becomes positive.

11.3.4 Net Present Value

The **Net Present Value** is calculated from the:

- Cash Value of all Annual Costs
- Cash Value of all Annual Lodgements and Savings
- Cash Value of Loan Payments
- Cash Value of Tax Payments
- One-off Payments
- Subsidies
- Self-Financing

11.3.5 Economic Efficiency Calculation - Other Proceeds/Savings

Here you can define any **Other Annual Proceeds/Savings**.

Click on **Add Position** to add a new position to the list.

To delete a position, first highlight the row by clicking on the appropriate cell in the first column and then click on **Delete Position**.

The **Inflation** indicates the average percentage change of a payment in comparison with the previous year.

11.3.6 Electricity Production Costs

The **Electricity Production Costs** are the annual costs divided by the amount of electricity produced.

The annual costs result from the:

- Cash value of annual costs,
- One-off Payments,
- Loan Payments
- Self-Financing

multiplied by the **Annuity Factor**.

11.3.7 Results Overview

The following payment sequences are available in the **Results Overview**:

- Total Investments
- Total Operating Costs
- Total Consumption Costs
- Total Other Costs
- Total One-off Payments
- Total Disbursements/Savings
- Total Subsidies

Total Loan Payments
Interest plus Repayments

Total Loan Interest

Payment Received for Grid Supply

Electricity Savings

Self-Financing
Total of Investments, One-off Payments less Subsidies

Depreciation

Result before Tax
Total of:
-Operating Costs,
-Consumption Costs,
-Other Costs,
-Subsidies,
-One-off Payments
-Disbursements/Savings
-Payment Received for Grid Supply

-Electricity Savings
-Depreciation
-Loan Interest

Tax Rebate
Is calculated using the Marginal Tax Rate from the Result before Tax.

Result after Tax
Result before Tax plus Tax Rebate

Cash Flow after Tax
Total of:
-Operating Costs,
-Consumption Costs,
-Other Costs,
-Disbursements/Savings
-Payment Received for Grid Supply
-Electricity Savings
-Loan Payments
-Self-Financing
-Tax Rebate

Outstanding Loan Payments
Payments are listed here which at the time require interest and repayments to be paid.

Cash Balance (Accrued Cash Flow)
Total Cash Flow after Tax

Cash Balance less Outstanding Loans

12 Results Menu

With PV*SOL® you have a number of alternatives for evaluating the simulation results. The results are not saved, as the results files would be too large and you can simply and quickly re-run a simulation whenever you wish.

There is, however, a roundabout way of saving the results if required. This is done from within the Graphics facility in the **Table** menu command.

Most menu commands are only activated (ie the lettering is black not grey) after simulation. However, you are able to view the data loaded from the Climate data files, the parameters entered under Technical Data in the Detailed Project Report and the Variant Comparison at any time.

12.1 Annual Energy Balance

The quickest way to view the most important results after simulation is to go to the **Annual Energy Balance**.

The annual results for energies and various evaluation dimensions are given in table format.

The output values vary according to the type of system.

If you have defined a PV system with a number of sub-arrays the values for each array are each given on a separate sheet.

You will find more details on output values under the heading Definitions

If you want to print the results go to **Project Report/Summary**.

If you want to view the values over a period of time go to Energy and Climate Data.

12.2 Energy & Climate Data - Graphics

Printing Graphics

The usual WINDOWS print dialog appears in which you can select the settings and printer desired.

Graphics Screen

Legend

This field contains a description for each data record being displayed.

If energies are illustrated, the sum of the energy in the selected period is shown next to the name of the data record.

Power output, temperatures, wind speed and evaluation quantities (energy coverage, performance ratios and efficiencies) are displayed as mean values for the period.

The legend can be selected and repositioned.

Title

By double clicking on the title frame a dialog window opens in which you can give the graph or chart a new title. When you close this window the new title appears in the title frame. The title can dragged and dropped with the mouse to any position within the graphics window.

Co-ordinates Field

At the base of the graphics window a field displays the actual co-ordinates indicated by the mouse pointer when it is located within the diagram. The date and time, as well as the x-value for the position of the mouse pointer are shown.

Selecting and Amending the Data and Axes

The individual data records displayed in the graph or chart and the x and y-axes can be selected by a single click of the left mouse button. The selection is shown by points along the lines in a line graph and on the bars in a bar chart. Click just below the lines for a line graph and the x axis, just under the top of one of the bars for a bar chart and to the left of the line for the y-axis.

By double clicking on the x or y-axes the dialog window Formatting the X-Axis or Formatting the Y-Axis appears. By clicking with the right mouse button on either the axes or the graph a pop-up menu appears with the corresponding menu commands.

You can quickly change the format of the selected data record or axes by using the Speed Buttons.

12.2.1 Formatting of Graphs

The menu labelled **Graphs** lists the (selected) data records that can be displayed in graph, chart or table form.

For each data record the menu command **Own Y-Axis** enters an additional y-axis into the diagram assigned to the data record selected.

Under **Graphs** you can select a data record and at the next menu level select a variety of formatting options. Here you can select *line graph* or *bar chart* format and *bold* or *normal* line display.

With *change color* you can select from a wide range of colors for the lines or bars in your graph or chart.

By choosing the command *invisible* the selection is suppressed but not deleted.

12.2.2 Formatting the X-Axis

In this dialog window you can define the time period to be displayed in a graph or chart as well the time period over which the data record values are to be summarised or averaged out.

Column Width

The column width represents the time period within which the data is presented. Depending on which unit you have selected, the data record values are either summarised (energy) or averaged out (power output, temperatures) for the interval selected.

Display From

The date from which the data displayed in the graph should begin is entered here (in date format).

Display Interval

Here you should enter the period over which the data should be displayed in the graphic.

Units

The choice of units for the bar width and display interval (hours, days, weeks, years) is made from the pull down menus. You will need to enter the multiples of these units in the fields provided.

12.2.3 Formatting the Y-Axis

The y-axis is formatted in this dialog window.

Unit
Select the unit to be displayed from the field labelled Unit. If you select **Position on Right** the y axis will be placed on the right-hand side of the diagram.

Position of the Y-Axis
In this field you can select the cross-over point of the axes. You can select either minimum (zero) or maximum, or you can enter a value yourself.

By selecting the field **Own Scale** you can format another y-axis for the selected data record.

Minimum Value
Enter the smallest value to be illustrated for the data record.

Maximum Value
Enter the largest value to be illustrated for the data record.

Main Intervals
The labelled intervals along the y-axis.

Sub-Intervals
The division of the main intervals along the y axis.

12.2.4 Printing Graphics
The usual WINDOWS print dialog appears in which you can select the settings and printer desired.

12.2.5 Graphics in Table Format
The graphs selected in the Energy and Climate Data... dialog window can be displayed in table format. Just click on the **Table** menu to switch to table format.

The various recording stages and intervals are incorporated from the graph into the table. If you want to change these go to the menu **Axes**/**X-Axis**, and make the changes in the dialog window. You can also quickly change the display interval units from the **Display** menu.

Clicking on the menu **Line**/**Bar** switches back to line graph/bar chart format.

The position of the decimal point depends on the y-axis' main interval setting. To **Edit** the main interval setting you have to first go back via the **Line**/**Bar** menu and then to **Axes**/**Y-Axis**. You can then make amendments to the main interval or the units and then go back to **Table**.

From the **File**/**Save As** menu you can save the results as an ASCII file and from **File**/**Copy** you can copy the values for pasting into other spreadsheet programs such as EXCEL (or use the speed button).

12.2.6 Graphics Screen Speed Buttons
By using the speed buttons you can perform a variety of functions and quickly change the format of the selected parts of the graph or chart or axis.

Print Graphic.

Copy Graphic (eg to paste into EXCEL for further processing).

Go to next or previous time period.

Go to first or last time period.

Enlarge or reduce font size of selected area of graphic.

Change between normal and bold font in selected area of graphic.

Change font.

Change selected data record to line graph or bar chart.

Add grid lines.

12.3 Payment Received for Grid Supply

This menu point is first activated after a simulation has been carried out.

The tariff forming the basis of the calculation is shown in the **Tariff Name** field.

Energy fed into the grid is shown separately for high and low tariff rates and for summer and winter.

The remuneration received for the electrical energy is provided on the basis of the tariff selected and the amount of energy exported to the grid.

The calculation results for the **Payment Received for Grid Supply** are printed in the Economic Efficiency Calculation.

12.4 Grid Electricity Costs

Here you are given a detailed list of variables for energy use under the headings: Kilowatt-Hours, Load and Discounts/Supplements, and the resulting costs (payments to the electricity utility). The values are given for two scenarios: **With PV System** and **Without PV System**.

Without PV System - the cost of electricity used is determined by the energy consumption of the electrical appliances.

With PV System – the cost of electricity used is determined by the amount of energy drawn from the grid.

Depending on the supply concept (see Tariffs), the energy used by the electrical appliances plus the energy used by the PV system itself is provided exclusively by the grid (**Full Supply**), or, with the **Own Use** concept, the amount of energy generated by the PV system must be deducted from this amount.

The name of the tariff on which the calculation is based is shown in the field at the top of the window. The tariff is defined under the menu point Conditions/Tariffs.

The results of the tariff calculation are given in a detailed table, divided into three sheets. A summary with the final result **Total Payment** is given in a field at the bottom of the window.

Kilowatt-Hours:

Specific Costs: Average specific costs in the given period.

Kilowatt-Hours from Grid: The number of kilowatt-hours of energy drawn from the grid in the given period.

Costs: costs before the deduction of discounts and the addition of supplements.

Payments: costs after the deduction of discounts and addition of supplements.

Load:
(see also the dialog: Power Measurement).

Set Load Price: the set demand price as entered or the estimated price for wholesale provision of power to the utility.

Heavy Load Peak: for heavy/light load capacity measurement, the heavy load peak is given here.

Billing Load (Output Value): The output that is included in the billing calculation is given here, or, if a 96 hour tariff is in use, the output value is given.

Specific Load Price: Average specific load price in the given time period.

Consumption Dependent Load Price: billing load * specific load price.

Total Power Payment: represents the sum of the set and consumption dependent power prices after deduction of discounts and addition of supplements.

Discounts/Supplements:
Set Costs: The set costs defined in the Discounts and Supplements dialog.

Hours of Full Utilisation: from quarter hour power measurement, the total hours of full utilisation and the resulting load utilisation period discount are provided.

Other Discounts, Supplements: the rebates and supplements entered in the ”Discounts and Supplements” dialog are also shown here.

You are not able to enter values in this window.

12.5 Pollutant Emissions

This menu point is activated after simulation has been completed.

Here you can view the values for the pollutant emissions that have been avoided by use of the PV system.

The evaluation of pollutants varies for energy consumption and for energy provision to the grid.

With the ”Own Use” supply concept (see Tariffs) the energy supplied by the PV system replaces the energy from the grid. This is evaluated in the Pollutants dialog in the column labelled ”Specific Pollutant Emissions per kWh of Electricity” for the electricity **consumed** by the appliances.

The electricity supplied to the grid by the PV system is also evaluated in the Pollutants dialog, as a value of ”Specific Pollutant Emissions per kWh of Electricity” **avoided** by feeding the energy into the grid.

Emission values required for the calculations are entered under the menu heading Conditions/Pollutant Mix.

12.6 Project Report

The results of the simulation are presented and can be printed out in the Project Report.

There is a one page Summary containing the most important simulation results and a multi-paged Detailed Project Report, that also contains the results of the Economic Efficiency Calculation.

12.6.1 Detailed Project Report

The Detailed Project Report is made up of three sections and can be viewed in preview (see Page Layout).

The first section gives the **System Data** for the PV system (System menu) and the appliances (Appliances menu). The types of modules and inverters used are given in the details for manufacturer, type, output and efficiency.

The system data can also be produced before simulation.

In the second section, the **Detailed Results** are presented. These basically consist of the Annual Energy Balance results plus a number of other results.

In addition, a graph illustrating the solar energy produced, the energy requirement and the supply of energy to the grid is provided. With the supply concept “Full Supply” the solar energy produced equals the amount of energy supplied to the grid.

In the third section the **Economic Efficiency** for stand-alone systems can be printed. If you want to change the parameters (investment, subsidy, interest etc) go to the Calculations/Economic Efficiency Calculation... dialog. For grid connected systems, the Economic Efficiency Calculation can be printed from the Economic Efficiency Calculation – Grid Connected systems dialog.

You can print the roof layout as a separate document via the menu: Results › Project Report › Roof Layout. This function is only active if the roof layout has been used in the project. Alternatively, you can select the detailed project report via the menu: Results › Project Report › Detailed Project Report, and then decide whether you want to include the roof layout in the detailed project report. If so, select the Roof Layout option.

All three sections can be printed separately. Click on the

button and a Print dialog appears showing the sections that can be printed and the number of copies.

12.6.2 Print dialog

The standard printer is the printer selected in WINDOWS’ system settings. If you want to print to another printer, go to the **Select Printer** dialog by clicking on the **Settings** button.

In addition, towards the bottom of the dialog, you can see the **Subjects** that can be printed out. (Normally only one title is included.) At least one subject must be selected.

The number of copies that you want to print should also be entered in this window.

12.6.3 View Page Layout

This dialog allows the page layout of documents that can be printed to be viewed before printing.

Where there are number of pages, you can move easily between pages:

- either click on the arrow buttons in the menu bar, or
- or use the scroll bar on the right of the screen.

If there is only one page, no arrows are displayed.

When scrolling down a page (click on the black arrows in the scroll bar) the page will move to reveal any part of that page that is out of view, or the screen will move straight to the next page.

If the cursor is positioned within the area where it appears as a magnifying glass , the page being viewed can be enlarged or reduced. A ”+” in the magnifying glass means that the view area can be enlarged, and a ”-” means that the view area can be reduced. The area directly around the magnifying glass is enlarged.

Click on the printer symbol button to open the Print dialog.

12.6.4 Summary Project Report

This dialog is a page preview (see Page Layout) of the one-paged project summary. This can also be printed out.

The **System Diagram** is shown. Each sub-array is allocated a PV symbol with details on the number, manufacturer and type of modules, the power output, tilt, orientation and type of mount. If the design includes multiple inverters the sketch will also include an inverter symbol for each sub-array, indicating the number, manufacturer, type and output. Depending on the supply concept selected (Own Use or Full Supply), the meter symbols are arranged differently. Values for the supply to grid tariff and the appliances' annual consumption are given as text with the appropriate symbol.

The annual results are basically the results of the Annual Energy Balance for the entire system. In addition, the level of CO^2 emissions avoided is given in the pollutant balance results.

12.7 Variant Comparison Selection

In this window you can select the projects you want to compare in table format from the list of existing projects.

After the selection of systems has been made (not available with PV*SOL®-N for grid connected systems only), the projects will be shown together in a table – grid connected or stand-alone systems are grouped and listed separately .

A selection is made by marking the project required and moving it into the selection list.

Click on this button to select the projects. You can also drag and drop highlighted projects into the list.

With this button you can deselect projects from the list. Click on the field labelled **Current Project** to load the current project into the comparison table, provided it belongs to the selected system type.

Comparison Table

Click on **OK** to exit the dialog and another dialog opens in which the most important parameters and a summary of the simulation results are displayed.

The window has its own menu with the **Close** and **Copy** commands. The **Copy** command copies the table, so that the variant comparison can be pasted into external spreadsheet or word processing programs for evaluation and printing out.

The dimensions produced are different for grid connected and stand-alone systems. The table headings, however, remain the same for both systems.

Table Headings

File Name: the file name is set when the project is saved. If the current project has been selected but not yet saved, the file name **Current Project** is allocated. Otherwise the file name is given without the directory path – eg Solar1.prj. The current project's file name is displayed at the top of the main screen.

Variant Reference: the project variant reference can be entered at the top of the main screen or is given as the file reference when saving the project.

Project Name: the name of the current project is entered in the first line of the ”Project Administration” dialog and shown at the top of the main screen.

Climate data file: the climate data for the current project is also displayed at the top of the main screen. The climate data file that was last loaded is used for all new system designs. The climate data can be changed via the **Conditions**/**Load Climate Data File** menu. Climate data files have the file extension *.wbv.

12.7.1 Variant Comparison

The projects selected in the Variant Comparison... are set out in a table in this dialog.

The most important parameters are shown, as is a summary of the simulation results.

The window has its own mini-menu with the **Close** and **Copy** commands.

The **Copy** command copies the table so that you can paste the variant comparison table into spreadsheet programs such as EXCEL or into word processing programs.

13 Database Menu

From the Database menu you can view the various database sections, make changes and add new files.

When entering the project data you will have to load the individual components for the PV system from the database files.

During the design and configuration of a project it is not possible to change the component values from the project screen, with the exception of the **To Grid Tariff** and the **Individual Appliances**. See also Project Design.

➔ **see also:**
Editing Projects

Using Data from Databases

13.1 PV Module

Here, on a number of worksheets, you can set the characteristics for the PV modules. Details on using the database are given under Project Design.

As in all database dialogs, there are the **Load**, **Save** and **Close** buttons and there is also a **Print** button.

13.1.1 Worksheet 1 – Basic Data:

Manufacturer and **Type** are allowed a maximum text length of 50 characters.

Output Tolerance [%]

The given module values are subject to fluctuations during manufacture. This is relevant mainly for the specification of current, voltage and power output.

Cell Type

The majority of cells consist of mono-crystalline or poly-crystalline silicon, with a few made of amorphous silicon.

New cell types will, however, soon be available.

Dimensions: Height [m], Width [m]

The height and width determine the module surface and therefore the PV array surface area. This surface area, based on the measurement of the modules, is referred to in the program as the **Gross Module Surface Area**.

13.1.2 Worksheet 2 - U/I Characteristics under STC:

The specifications on this page are only valid for standard test conditions (STC). This means a module temperature of 25°C, a sunlight spectrum of AM 1.5 and 1000 W/m² irradiation.

MPP Voltage [V], MPP Current [A]

The power output of the modules is dependent on the module temperature and irradiation, and the module voltage. For each module temperature and irradiation value there is a current/voltage characteristic curve, and the working point on this curve determines the modules' power output.

The MPP is the working point on this curve (see also the U/I characteristic curve button on the sheet: U/I characteristics - part load) where the power output of the modules is the greatest (Maximum Power Point).

The MPP voltage and the MPP current are dependent on temperature and irradiation. This means that the voltage and current given here are only valid for standard test conditions. For all other irradiation and temperature values there is another MPP. This must be defined by the program (see: U/I characteristics - part load).

Within the PV system this task is carried out by the inverter, which regulates the voltage of the PV generator to maximise current and voltage production (MPP tracking).

No-Load Voltage [V]
The voltage that arises when the module is load free. This value is also dependent on temperature and irradiation.

Short Circuit Current [A]
The electricity that flows through a short circuited module. This is also temperature and irradiation dependent.

Specified Power Output [W]
The power output that the module produces under standard test conditions according to the manufacturer's data sheets. The actual power output is defined from the module voltage and the module current, and is given in the **Calculated Power Output** field. In defining the installed PV power output, PV*SOL® always refers to the calculated power output.

Efficiency [%]
The module efficiency rate under standard test conditions. For the simulation, the program determines the **Solar Module Surface Area** from the calculated power output and efficiency with the following formula:

Nominal output(STC) = 1000 W/m² * ETA(STC) * Solar module surface area

13.1.3 Worksheet 3 - U/I Characteristics under Part Load Conditions:

Current and **Voltage** for a second working level are entered on this page. The values for a lower level of irradiation are important in order to be able to calculate the module efficiency curve. The efficiency specifications in data sheets are based on a module temperature of 25°C and irradiation of 1000 W/m², although for most of the year these levels are seldom reached. The efficiency rate at a lower level of irradiation is therefore very important for the simulation results. There are a number of important points to consider when determining the second working point (Module Efficiency - Part Load). Click on the **Help** button to view these. The program will calculate the second working point for you if you click on the **Typical Part Load Efficiency** button.

You can view a graph of the characteristic curve calculated by the program by clicking on the **Efficiency Curve**, **U-I Curve** or **U-P Curve** buttons.

13.1.4 Worksheet 4 – Other Characteristics:

Temperature Coefficients:

Voltage Coefficient [mV/K]
This value expresses how many degrees the voltage decreases when there is a rise in module temperature. The hotter the module, the lower the voltage, ie this coefficient is negative.

Current Coefficient [mA/k]
This value shows by how many amps the current increases when the module temperature rises. The higher the module temperature, the higher the current, ie this coefficient is positive.

Power Output Coefficient [%]
The hotter the module, the lower the power output. This coefficient is negative and is proportional to the nominal output.

Incident Angle Modifier [%]
The incident angle modifier is a characteristic of the material covering the module (glass). The glass reflects part of the radiation away from the module resulting in a loss of current. The incident angle modifier reduces the amount of direct radiation falling onto the module. The correction factor for diffuse radiation lost through reflection is assumed at 95%.

Maximum Module System Voltage[V]
Each electrical appliance has a maximum voltage limit. This value refers to the maximum voltage that a sub-array can support in order to ensure that no damage is caused to the modules. If the maximum voltage is too high, you should reduce the number of modules in series.

Specifications for the Dynamic Temperature Model:
Heat Capacity [J/(kg*K)], Absorption Coefficient [%], Emissions Coefficient [%], Weight [kg]

These are the parameters for the dynamic temperature model required for working out the thermal balance equation.

1. Click on Load to load one of the module files provided, to check on the values and correct if required.
2. Click on Save to save the values you have entered, either in the current file or as a new file. A message appears before a file is overwritten.
3. Close exits the dialog without a message appearing.

If you want to print out the file that has been loaded last click on **Print**. This will be printed on the standard printer as specified in printer set-up.

13.2 Module Part Load Operation

The module's operation under part load conditions is calculated from the specifications for no-load voltage, short circuit current, MPP voltage and MPP current with low irradiation and a module temperature of 25°C.

The second working point, ie the choice of irradiation level, has to be set under certain restrictions. It must be selected so that, at the irradiation point set, the fill factor is at maximum, or so that, with lower irradiation, the fill factor becomes considerably smaller and with higher irradiation the fill factor is around the maximum value.

The definition of the fill factor is:

FF = (MPP current * MPP voltage) / (short circuit current * no-load voltage)

The fill factor (FF) is dependent on the irradiation. If a FF above the irradiation is applied, this results in the fill factor function. Depending on the module and the irradiation, the FF is usually set at around 55% and 85%.

If you don't have any suitable specifications for part load operation, you can run the calculation with standard values by clicking on the **Typical Part Load Operation** button.

For most modules, the irradiation at the fill factor maximum is 300 W/m². The fill factor is set at 5% above the FF under standard test conditions. Linear part load operation is given for the current.

After you have entered the values for module part load operation, it is essential to take a look at the efficiency characteristic curve and to test that there are no discrepancies.

13.3 Inverter – Grid Connected Systems

The characteristics for the inverter are entered in this window. Details on using the database are given under Project Design.

If you want to enter an inverter that can be switched to different voltage levels, you will have to enter the individual voltage fields as separate inverters with the characteristic data for each of these.

As in all database dialogs there are the **Load**, **Save** and **Close** buttons and there is also a **Print** button.

Manufacturer and **Type** are allowed a maximum text length of 50 characters.

DC Power Rating [kW]

DC stands for direct current and refers to the input side of the inverter. As this value is not clearly defined by inverter manufacturers, it is no longer used in PV*SOL and is shown for information only.

Max. DC Power [kW]

This value is also not clearly defined by inverter manufacturers. It is no longer used in PV*SOL and is shown for information only.

AC Power Rating [kW]

AC stands for alternating current and refers to the output side of the inverter. The AC power rating is the output that the inverter is designed for when in continuous operation. When the inverter is in continuous operation the power output is limited, with the AC power rating being the upper limit.

Max. AC Power [kW]

The output that the inverter can produce in 10 minutes. This value is not currently used in PV*SOL.

Stand-by Consumption [W]

If no energy is being delivered into the grid or to the electrical appliances, the energy required by the inverter itself still has to be accounted for. In addition to the stand-by consumption there is also night consumption.

Night Consumption [W]

The inverter switches itself off during the night, but still uses a small amount of energy.

Input Level [W]
The minimum amount of energy to be produced by the PV generator before the inverter can function.

Nominal DC Voltage[V] / Nominal DC Current [A]

The input voltage or the input current of the inverter, when delivering nominal power output.

Number of MPP Trackers
The number of independently operating MPP regulators.

For multi-string appliances, this value is greater than 1.

Max. Input Current per MPP Tracker [A]
This current limit per MPP tracker should not be exceeded. (Only active if the number of MPP trackers is greater than 1.)

Max. Recommended PV Output per MPP Tracker[kW]
See Max. Recommended PV Output [kW]

Maximum Input Voltage [V] / Maximum Input Current [A]
This level of voltage or current should not be exceeded, otherwise the inverter will be damaged.

Upper and Lower Voltage Levels for the MPP Range [V]
Within this voltage range, the inverter is able to control the MPP tracking. The inverter finds the optimal voltage for the PV generator within this range, so that the generator's power output is maximized.

MPP Adjustment Efficiency [%]
The adjustment efficiency provides a measurement of how close the inverter's working point is to the PV generator's maximum power point (MPP). The program differentiates between the power ranges ‹20% and ›20% of the nominal output. The adjustment efficiencies are taken into account during simulation in defining the inverter's performance ratio.

Characteristic Curve - Inverter
This button opens the Characteristic Curve – Inverter dialog, so that the you can enter the conversion efficiency depending on the input power. These values should be obtained from the inverter manufacturer.

The European efficiency is calculated with the following formula:

Wg(EU) = 0.03*Wg(5%) + 0.06*Wg(10%) + 0.13*Wg(20%) + 0.1*Wg(30%)+ 0.48*Wg(50%) + 0.2*Wg(100%)

Deviation of the Input Voltage from the Nominal Voltage
The inverter's efficiency characteristic curve is entered for the nominal voltage. If the inverter is not operated at its nominal voltage, there is a change in the efficiency of the inverter. Whether the efficiency increases or decreases is dependent on whether the inverter has a transformer, or not. The following can be used as a rule of thumb:

The efficiency of an inverter **with a transformer reduces** with rising input voltage by about 1% per 100 V.

The efficiency of an inverter **without a transformer increases** with rising input voltage by about 1% per 100V.

1. Click on Load to load one of the inverter files provided, to check on the values and correct if required.

2. Click on Save to save the values you have entered, either in the current file or as a new file. A message appears before a file is overwritten.
3. Close exits the dialog without a message appearing.

If you want to print out the file that has been loaded last click on **Print**. This will be printed on the standard printer as specified in printer set-up.

➔ **See also:**
Inverter

Inverter – Stand-Alone Systems

13.4 Inverter – Stand-Alone Systems

The characteristics for a stand-alone system inverter are entered in this window. Details on using the database are given under Project Design.

Manufacturer and **Type** are allowed a maximum text length of 50 characters.

Nominal DC Output:
The direct current flows into the inverter. The nominal output is the power rating at which the inverter, under continuous operation, is designed to run.

Nominal AC Output:
This refers to the current that flows out of the inverter. The nominal AC output is the power rating that is available for the electrical appliances connected to the system.

Stand-by Consumption [W]:
If no energy is being delivered into the grid or to the electrical appliances, the energy required by the inverter itself still has to be accounted for.

Nominal DC Voltage:
The nominal DC voltage must match the battery's nominal voltage.

Nominal AC voltage:
The voltage corresponds to the nominal voltage of the appliances.

Characteristic Curve - Inverter:
This button opens the Characteristic Curve – Inverter dialog, so that the you can enter the conversion efficiency depending on the input power. These values should be obtained from the inverter manufacturer.

➔ **See also:**
Inverter

Inverter – Grid Connected Systems

13.5 Inverter Characteristic Curve dialog

The conversion efficiency is the relationship of the power output to the power input, dependent on the inverter power at that time.

The specification of the efficiency given in manufacturers' data sheets relates to the nominal output (power rating), which PV systems, however, are not able to deliver at most times of the year. Therefore the part load operation is much more important for the simulation results.

The program requires **7 support points** to define the characteristic curve, ie the efficiency at 0, 5, 10, 20, 30, 50 and 100% of the nominal output.

To view the characteristic curve in graphic form, click on the **Graph** button.

For grid connected systems, the European efficiency support points are fixed and displayed. If changes are made, these are first calculated on exiting the entry field.

➔ **See also:**
Database: Inverter

13.6 Battery (not available with PV*SOL®-N)

The following battery characteristics are entered in this dialog:

Manufacturer and Type:
You are allowed to enter a maximum of 50 characters.

Voltage:
The battery's nominal voltage.

C20 Capacity: Battery capacity with a discharge time of 20 hours.

Capacity:
The product of voltage and C20 capacity. This is calculated within the program by clicking on **Calculator**.

Self-Discharge:
The details from the battery's product data sheet should be recalculated to % per day.

Average Charge and Discharge Efficiency:
If you do not have these specifications to hand, please use the program's default values.

1. Click on Load to load one of the battery files provided, to check on the values and correct if required.
2. Click on Save or Save as… to save the values you have entered, either in the current file or as a new file. A message appears before a file is overwritten.
3. Close exits the dialog without any message appearing.

If you want to print out the values from the file that has been loaded last click on **Print**. The information will be printed on the standard printer as specified in printer set-up.

13.7 MPP Tracker (not available with PV*SOL®-N)

MPP trackers are not standard system elements, but are produced especially for the various stand-alone systems. They are also partly integrated into other system parts (charge controller).

For the MPP tracker the following data is required:

Reference:
The text entered is shown as the file reference in the load file dialog.

Nominal Output:
The nominal output corresponds to the power output of the PV generator.

Upper and Lower Voltage Levels for the MPP Range [V]:
The MPP tracker functions within this voltage range. The MPP tracker finds the optimal voltage for the PV array within this range, so that the array's power output is maximized.

MPP Adjustment Efficiency [%]:
The adjustment efficiency provides a measurement of how close the MPP tracker's working point is to the PV array's maximum power point (MPP).

Characteristic Curve – MPP Tracker:
This button opens the "Characteristic Curve – MPP Tracker" dialog, so that the you can enter the conversion efficiency depending on the input power. The program requires seven values to be entered for the characteristic curve: the efficiency at 0, 5, 10, 20, 30, 50 and 100% of the nominal power.

1. Click on Graph to view the characteristic curve.
2. Click on Load to load one of the MPP tracker files provided, to check on the values and correct if required.
3. Click on Save or Save as... to save the values you have entered, either in the current file or as a new file. A message appears before a file is overwritten.
4. Close exits the dialog without any message appearing.

13.8 Load Profile

The electrical load profile dialog appears, which shows an hourly breakdown of consumption and the annual consumption in both chart and table format. For more information on how to use the database see: Project Design.

With the **Load** and **Save** buttons you can open the Load and Save File dialog and you are able to load a file from the database or save a file to the database.

By clicking on the tabs above the chart you can view the various loads for the type of day selected, both in chart and table format.

If you want to **Edit** the profile values, you can do this in the table:

Click on the value to be changed within the table.

The hour and its corresponding value are highlighted.

The value appears in the field at the head of the table.

Key in the new value.

Click on any other value in the table.

The new value is loaded and appears in the chart.

If the values split over 24 hours do not add up to 100%, the program will do this if you click on the **100%** button.

With the **Copy** and **Add** buttons you are able to copy a consumption profile for one typical day to another:

Load the profile that you want to copy by clicking on the tab above the chart.

Click on **Copy**.

Change to the profile that you want to overwrite with the profile you have copied (click on the tab above the chart).

Click on **Add**.

13.9 Individual Appliances

The energy requirement for the individual appliances is defined in this dialog.

The individual appliances are an exception among the database files, in that you are able not only to select the appliances from the ”Individual Appliances” dialog, you are also able to define them from within this dialog. However, you are still able to create and amend individual appliance profiles from within the database.

The following data is required:

Name: The text entered appears as a file reference in the ”Load File” dialog.

Type: Click on the **arrow button** to view a list of the types of appliances available. The subdivision assists in the optimum setting of operating times, which is why the dialog distinguishes between the various types.

- User-Independent Appliance
- User-Dependent Appliance
- Short-Time Use Appliance
- Light

Output: the entry should include all appliances.

Monthly Operation Bar: click on a field above a **month** to switch off operation for the whole of that month (the field turns from green to white). Click on the **magnifying glass** to switch off operation for individual days. (Green field = in operation, white field = not in operation.)

By clicking on **Load** you are able to load an appliance from the database, in order to change the data provided.

If you click on **Save** you are able to save the values entered into the existing file or as a new file.

Click on the **Graphics** button to view the calculated energy requirement for the appliance in various formats: graph, chart, table. You are able to save and print these, and also copy into other documents/programs.

13.10 From Grid Tariff

The tariff for electricity from the utility grid used by the electrical appliances is defined here. For more information on how to use the database see: Project Design.

From the Load and Save File dialog and you are able to load a tariff file from the database or save a tariff file to the database [*.tar].

The tariff reference is given in the field labelled **Name**.

High Tariff and Special Tariff Periods are defined in the Tariff Time Periods dialog. These times are valid for electricity drawn from the grid as well as for energy exported to the grid.

The kilowatt-hour prices for each tariff time period (ie HT – high tariff, LT – low tariff and ST – special tariff) are entered in the Kilowatt-Hour Price dialog.

Click on the Power Measurement button to define the type of power measurement (¼ hour power measurement, 96 hour measurement) In addition, the prices for the energy provided by the grid utility is defined here and the light or heavy load periods are entered.

The grid utility discounts and supplements can be entered separately in the Discounts and Supplements dialog.

13.11 To Grid Tariff

Unlike the other database files, the **To Grid Tariff** can be selected and defined in both the **Conditions/Tariffs** menu dialog and in the Economic Efficiency Calculation... dialog. However, you can also define the To Grid Tariff via the **Databases** menu in the main menu bar.

A reference describing the data record can be entered in the upper text field.

Period of Validity for Tariff

For the first years, the **To Grid Tariff** is usually set at a higher rate. Thus you can take account of any subsidised electricity provided for a set period, following which the legally set minimum rate is paid.

To Grid Tariff after ... Years

Here you are able to define a different To Grid Tariff which is received following the initial period.

Number of Power Levels

Here you can set the number of **Power Levels** required to define the different **To Grid Tariffs**.

Tariff Zones/Graduated Tariff Rates

The method used for calculating the resulting **Payment Received for Grid Supply** varies according to the selection of either **Tariff Zones** or **Graduated Tariff Rates**. If Tariff Zones is selected, the result is an almost constant change in the payment, whereas the selection of Graduated Tariff Rates produces a jump from one payment rate to the next when the defined Power Level is reached.

Tariff Zones:

A mean **To Grid Tariff** for all **Power Levels** up to the **Installed PV Power** is calculated. For example:

0-30 kW - €1

From 30 kW - €0,50

A system size of 50 kW therefore produces a Payment Received for Grid Supply of 30/50*€1 + 20/50*€0,50 = €0,80.per kWh.

Graduated Tariff Rates:

In this case the To Grid Tariff is calculated direct from the Installed Power. Using the above example, this would result in a Payment Received for Grid Supply of €0.50 per kWh on all electricity supplied.

Payment Received for Grid Supply – High Tariff/Low Tariff different

If this option is selected, an additional field appears in which you can enter the **To Grid Tariff** at two different rates: a **High Tariff** and a **Low Tariff**.

The timings for High and Low Tariffs are the same as those for the **From Grid Tariff**. The timings are therefore dependent on the From Grid Tariff.

13.12 Pollutants

You can define a new pollutants file here, which can then be loaded into a project from the **Conditions**/**Pollutant Mix** menu.

In the **Text** field a file reference describing the data record is given, that was entered when saving the file.

Different values are required for simulating grid connected and stand-alone systems.

Grid Connected Systems

In the first column you need to enter the specific pollutant emissions that **occur** on production of the electricity required to supply energy from the grid.

In the second column you need to enter the specific pollutant emissions that are **avoided** by feeding PV energy into the grid.

This kind of differentiation is necessary when it can be expected that the grid utility will use different power plants for producing high and low peak electricity. For example the energy fed into the grid could suppress basic load electricity production with energy drawn from the grid occurring during peak times.

Stand-Alone Systems

For stand-alone systems the pollutant emissions for the **Back-up Generator** are given.

Click on **Load** to load a new pollutant evaluation file from the database or on **Save** to save new specifications to the database.

All emissions files must have the file ending *.emm. The directory that appears on opening the dialog can be set under **Options**/**Drives**.

The database that comes with the program consists of values from the Integrated Systems Total Emissions Model (GEMIS), published in 1990 by the German state of Hesse's Ministry for the Environment, Energy and Federal Matters.

13.13 Loans

From here you can enter the parameters for any loans taken out to finance the PV system.

Details on using the database are given under Project Design.

As in all database dialogs, there are the **Load**, **Save** and **Close** buttons and there is also a **Print** button.

The entry parameters for a loan are:

Reference

The reference, with a maximum text length of 50 characters, is required for selection in the **Financing** dialog of the Economic Efficiency Calculation.

Loan Capital

The amount of the loan is entered as a percentage of the investment volume.

Term

The time period that has been arranged for paying back the loan.

Loan Interest

The amount of interest that has to be paid on a loan.

Repayment-Free Initial Period
The years in which no loan repayment is required. A maximum period of two years is allowed.

14 Options Menu

The Options menu is used to enter specifications that are independent from the program and to define the basic settings for the use of the program.

14.1 Paths...

You are able to define the directories for all file types by clicking on the corresponding button. A directory dialog opens in which you can define a new directory path.

These settings are required in the program for standard drive selection in the Load and Save File dialog.

The individual components are searched for and saved in the following standard sub-directories:

	File Extension
Projects	.prj
PV-Modules	.mod
Inverter (Grid Connected)	.wrn
Inverter (Stand-Alone)	.wra
Batteries	.acc
To Grid Tariff	.eta
From Grid Tariff	.tar
Loads	.slg
Individual Appliances	.vbi
Pollutants	.emm
MPP Tracker	.mpp
Shade	.sch
Loans	.cre

14.2 Settings

Worksheet *Projects*

- On the worksheet, Projects, you can specify with which project the programme should open. You can select that either a new project or the last project worked on appears each time the programme is started.
- ☑ "No monitoring of project components" gives you the option of selecting that various Messages appear (click on field) or do not appear (leave field blank) during programme use:
- Select a standard feed-in tariff for new projects. This should be an .eta-file. The selected tarifr is displayed.
- Select either metric or imperial (U.K.) units.

Worksheet *System Check*

Here you can enter the settings that are required for the **System Check**.

Temperature and irradiation maximums are usually calculated from the Climate data file.

However, if you are certain about the maximum values that you wish to use as the basis for system calculation, you can enter these as the set values.

➔ **See also: 12.2.1 System Check**

Worksheet *Background Image*

- Define whether the current system or an uploaded image should be the program background. Load an image for grid connected systems and stand-alone systems, each.

Worksheet *Calculation Model*

Select whether the Dynamic Temperature Model or the Linear Temperature Model is to be used.

Please note that these setting remain in force after you exit the project.

The temperature of the PV module is important for calculating the power output. Temperature increase of 10°C leads to a power loss of about 5%.

With the **Simple Temperature Model** the module temperature is determined in linear dependence on the irradiation:

T module = T external + U * (G / Gstc),

and k is dependent on the type of module mount.

With the **Dynamic Temperature Model**, the thermal balance equation is solved. The 1 hour simulation step is, if required, subdivided into minute-long time steps.

To solve the thermal balance equation, the following module data (see database: PV Module) is required: module mass, heat capacity, absorption coefficient and emissions coefficient. In addition, the scalar wind speed from the Climate data files, as well as the height of the system, (see dialog: Technical Data/Calculation Model/Losses) are included in the calculation.

As the subdivision of the calculation steps leads to a considerably longer simulation time, and, for rough calculations, the simple temperature model is perfectly adequate, the user is given the option to carry out the calculation with whichever temperature model is preferred.

Worksheet *Project report*

- Define your company's contact data for the project report.
- Define Company Logo for Project Report Heading
  Select a logo to appear in the header of the project report.
- If you select “Show Company Logo on Screen”, the logo appears on PV*SOL’s main screen as a background image.

Worksheet *Update Check*

➔ **Prerequisite: active internet connection**

➔ **The program checks whether a new update is available on the server according to the settings on the page Internet update:**

- Daily at first program start
- Or on clicking *Check now …* .
- If you are using a proxy server, you can enter the required settings here.
- If a new release or new databases are available, the program will close and the installation program will be downloaded to the Desktop and run from there.

14.2.1 System Check

In order to check the interconnection of modules and inverters or MPP trackers and batteries, and the influence of losses in the direct current cabling, click on the **System Check** button before exiting the Technical Data dialog. Depending on the system connections the system check takes place on one or a number of pages.

If new Settings for temperature and irradiation maximums have been entered under Options/Settings, you will be reminded of this by a message at the base of the window.

No Discrepancies

You should only exit the ”Technical Data” dialog when, after the system check, the following message appears:

On checking the system no discrepancies have been found!

Further Calculation Possible

If discrepancies appear, but a simulation of the system is still possible, the following message appears:

Please check the system parameters! Further calculation possible.

Incorrect Database Data

The system check requires that module and inverter data is saved in the database. If specifications are missing, or if the specifications are not physically possible, a message appears:

The database files contain incorrect values!

Select Components

If you go to the system check before loading the module and inverter specifications, this message appears:

Please select components from the database files available!

Check System Parameters

If during the system check errors are found that have to be corrected before simulation can take place, the message is:

Simulation is not possible until you have checked and corrected the system parameters!

The following checks occur for grid connected systems:

Output checks

The inverter's nominal output and maximum PV output are compared with the installed PV output per inverter. The inverter's capacity is defined from the PV output divided by the inverter's nominal output. A message appears if the capacity is less than 90% or more than 110%. Capacities less than 20% and more than 300% are not accepted.

If the PV output is larger than the inverter's nominal output, the inverter must reduce the output to the inverter's nominal output. If the PV output is significantly less than the inverter's nominal output, the inverter works at a low efficiency rate.

MPP Voltage Check

The inverter's MPP tracking field is compared with the MPP voltages of the modules connected in series. The voltage decreases with rising temperature and decreasing radiation.

Boundary values in defining the MPP voltages that occur in the PV system are:

- a working point for high irradiation and low temperature to define the maximum MPP voltage, and
- a working point for low irradiation (onto the tilted module surface) and maximum module temperature to calculate the minimum MPP voltage.

The working points are dependent on the:

- location of the system,
- orientation and inclination of the modules, and the
- type of module mount.

PV*SOL® takes the lowest module temperature as being equal to the lowest external temperature in the climate data record being used. Maximum radiation is taken from the climate data record for the month in which this temperature occurs, for the preceding month, and for the following month, and is converted onto the tilted module surface. For example, with an orientation due south and a 30 inclination, the values for two different locations are:

Berlin: 14 C und 858 W/m²

Freiburg: 11 C und 957 W/m²

To define the system's lowest MPP voltage, the value of the irradiation during module part load performance is taken from the module database as the minimum irradiation. For example: 300 W/m².

The maximum module temperature for this irradiation is defined by the maximum temperature at the system location plus an offset. The maximum system location temperature is read from the climate data record being used. The offset is dependent on the module mount and the irradiation.

It applies that:

$T_{max,Modules} = T_{max,Sys.\ Location}$ + factor * G_{min} / 1000.

Factor = 20 for free-standing modules,

Factor = 30 for rooftop mounting with ventilation space, and

Factor = 45 for roof or façade-integrated modules without ventilation space

This gives, for example, an offset of +9°C on the external temperature for modules with ventilation space, and a minimum irradiation of 300 W/m².

If under Options/Settings/System Check you select **Set Values,** you can enter temperature and irradiation extremes, which are then used in the system check.

The module array's MPP voltage is calculated for both of the working points described above, and then compared with the inverter's MPP tracking range.

A message warning of discrepancies appears if the inverter's threshold values vary by more or less than 10% from the modules. A value over 50% less than the lower MPP threshold is not permitted.

Overstepping the upper MPP threshold is restricted at the next stage by the strict observation of the maximum no-load voltage.

Upper Voltage Threshold Check

The inverter's maximum system voltage must not be exceeded on any account. Exceeding the inverter's upper voltage threshold can cause irreparable damage to the inverter.

The maximum occurring voltages should be checked very carefully.

As a comparative value PV*SOL® defines the module array's no-load voltage at the working point: minimum module temperature and maximum irradiation. This point has already been calculated for the MPP voltage check (see: MPP Voltage Check).

A message that the critical voltage has been reached appears if the module array's no-load voltage equals the maximum inverter voltage.

You are able to continue with simulation, but you should take into account when planning your system, that exceeding the maximum inverter voltage can cause irreparable damage to the inverter.

Exceeding the maximum voltage by 25% is not permitted.

The following checks are made on stand-alone systems:

Stand-Alone System Inverter AC Output Check

For AC appliances the inverter's nominal AC output and the appliances' maximum output are compared to ensure that the inverter can deliver the maximum output for the appliances.

Without a back-up generator, a message appears if the inverter output is less than 98% or greater than 120% of the appliances' maximum output. Outputs less than 33% and greater than 500% of the appliances' maximum output are not accepted.

If a back-up generator is used, this is able to cover the consumption directly, ie the back-up generator's energy does not flow through the stand-alone system inverter. The upper threshold remains the same, but the program does not strictly set the lower threshold.

Stand-Alone System Inverter Voltage Check

For the AC appliances, the battery voltage is compared with the inverter voltage. Both components are loaded from the database and have to be checked against the system voltage.

Battery Voltage Check

If your system has direct battery connection, the battery voltage sets the modules' working point. The battery voltage is dependent on the charge condition. PV*SOL® works with a characteristic curve for the (averaged) voltage.

These benchmark figures are compared with two working points for the modules' MPP voltage, ie the MPP voltage at 500 W/m² and 25°C, and at 1000 W/m² and 25 C (STC)

A message appears if the minimum battery voltage is less than 60% and the maximum battery voltage is larger than the corresponding MPP voltage.

Simulation is blocked if the minimum battery voltage is less than 40% and the maximum greater than 110% of the corresponding MPP voltage.

MPP Tracker Output Check

If an MPP tracker is used, a check is required to see if the MPP tracker's output corresponds to the PV output. If the figure is exceeded the PV energy produced will be reduced, if the figure is not reached the MPP tracker works at a poor efficiency rate.

A message appears if the MPP tracker's output is less than 90% and more than 120% of the PV output. MPP tracker outputs less than 33% and more than 500% of the PV output are not accepted.

MPP Voltage Check

The MPP tracker's MPP tracking range is compared with the module array's MPP voltages. The voltage decreases with increasing temperature and decreasing radiation. The definition of the working points is as described in the grid connected system check.

For both of these working points the module array's MPP voltage is calculated and compared with the MPP tracker's MPP tracking range.

A message warning of discrepancies appears if the MPP tracker's threshold values vary by more or less than 10% from the modules. Not reaching the lower MPP threshold of around 50% or exceeding the upper MPP threshold of around 25% is not permitted.

Cabling checks are made on both types of systems, and on each sub-array.

DC Cabling Check

The flow of current through the cabling under standard test conditions (STC) is defined by the module current flow under STC and the number of parallel-connected modules in an array. This should not be more than the permitted electrical capacity of the cabling.

In the program, the maximum capacity for group 3 insulated copper wiring is based on the Federation of German Electricians' regulations. Relative cabling losses are calculated from the cabling resistance, electricity and voltage under standard test conditions.

Cabling losses of above 20% are not accepted and PV*SOL® produces a message when these are above 5%.

14.2.2 Database Monitoring System

When a mismatch is uncovered by the database monitoring system, a corresponding message appears on screen. For example:

1 In PV Array 1 no module file has been selected from the database! Do you want to select a PV module? If so click on the PV Module button.

2 The database file for the module
data in PV Array 1 no longer exists!
Do you want to save the data to a new file?

3 The database file
c: \pvsol \biblio \module \mei76.mod
has been changed!
Load file data into your project?

Checks 1 and 2 take place when the corresponding dialog (Tariffs, Technical Data, Appliances) is closed with ”OK”. These messages are for information and can be closed by clicking on ”No”.

Check 3 takes place before simulation and, for modules and inverters, additionally when the ”Technical Data” dialog is opened.

It is best to answer ”Yes” to the question ”Load file data into your project?” (except in the instance when you open an old project and want to simulate the old conditions), or to select ”Accept All” beforehand. (see Message: ... Database File...).

14.2.3 Message: ... Database file ...

The database file has been changed! Load file data into your project?

Components from the corresponding Database are loaded from the dialogs: Tariffs, Polutant mix, Technical Data and the load pattern in the Electrical Appliances dialog. The program loads the corresponding values and notes the file name.

If you change the database files that have been loaded or saved in a project, the program informs you before simulation, that you have made changes to the database file without loading the new values into the project.

If you answer YES the project data is updated with the corresponding amended database data; if you answer NO the original values are retained.

Because all the database files that are loaded into a project are checked before simulation, you can click on **Accept All** so that you only have to answer the question once.

Cancel ends not only the data checks, but also the simulation.

This message appears for modules and inverters, and also on opening the technical data dialog.

No data checks for “To Grid Tariffs”!

15 Language Menu

PV*SOL® currently offers a selection of the following languages: English, French, German, Italian, Spanish.

16 Help Menu

You can also access this menu command by use of the F1 key from anywhere within the program.

Via the **Internet Service** you are able to download a PV*SOL® **Order Form** from the internet, or find out more about Valentin Software.

The menu command **Info** provides details on the program such as the PV*SOL® version number.

Changing the PV*SOL® version you are using is possible with the **Change Registration** command.

For example, this is necessary if you want to convert the Time-Limited Version to the Full Version, or the Grid Connected Only Version to the Version for both Grid Connected and Stand-Alone Systems.

17 Glossary

Array – see PV Array.

Back-up Generator – Direct Energy Use

If a back-up generator is specified in the system configuration, the energy generated by the back-up generator and the energy used directly by the appliances is identified. With direct current appliances, the alternating current is converted to direct current by the battery charger.

Back-up Generator - Energy

The energy generated by the back-up generator includes direct energy consumption and the energy used to charge the battery.

Back-up Generator – Fuel Consumption

If a back-up generator is used, the annual fuel requirement needs to be specified. The fuel consumption is calculated from the energy generated by the back-up generator and the specific fuel requirement entered.

Battery - Charge

The total energy going into the battery (or the batteries) is shown. If the system is simulated without a back-up generator, this corresponds to the solar energy charge.

Battery –Charge, Solar

For systems with a back-up generator, the portion of the charge that comes from solar energy is given separately. The difference from the total charge comes from the back-up generator's portion.

Battery – Charge Condition

The battery's charge condition at the start of simulation can be defined in the system configuration (default = 30%)

Battery – Content, Back-up Generator (After Simulation)

This value appears only when a back-up generator is used. It describes the proportion of energy produced by the back-up generator that is available in the battery at the end of the simulation period.

Battery – Content, Solar (After Simulation)

The proportion of solar energy available in the battery at the end of the simulation period is given.

Battery - Discharge

The total energy from the battery (or the batteries) is shown. If the system is simulated without a back-up generator, this corresponds to the discharge of solar energy.

Battery – Discharge, Solar

For systems with a back-up generator, the proportion of discharge that is based on solar energy is given separately. The difference from the total discharge comes from the back-up generator's portion.

Battery - Losses

Battery losses come from the battery efficiencies during charge and discharge, and self-discharge.

Battery - Performance Ratio

The battery's performance ratio is the relationship between discharge and charge.

Charge Condition at Simulation Start/End

The battery's charge condition at the start of simulation (defined in the system configuration) and the calculated charge condition at the end of simulation is shown.

Consumption - Requirement

The requirement is the sum of the annual energy requirement of all defined Appliances.

If no appliances have been defined, this value is not given. You are also able to define appliances if the ”Full Supply” to grid concept has been selected.

Consumption – Covered by Solar Energy

The consumption covered by solar energy is made up of direct energy use and the solar portion of the battery charge.

Consumption – Not Covered

The consumption requirement that cannot be covered by the system is shown as the amount of energy required that cannot be provided either by the PV array or by the battery.

Energy Converter

This dimension is only shown if MPP tracking is going to be used. The losses that occur when using an MPP tracker are subtracted from the generated energy.

Energy Requirement - Covered by PV Generator

This dimension is only given when the ”Own Use” concept is selected. It is the energy generated by the solar system that is used to cover the energy requirement of the appliances.

External Temperature

The external temperature is a specification taken from the climate data files. It is required to define the module temperature, as the module efficiency is dependent on the temperature (see PV Module).

Generated Solar Energy (Alternating Current Side)

The generated solar energy (AC side) is the energy after conversion of the PV direct current into alternating current, which can either be fed into the grid or used to cover the load requirement. The energy used by the inverter itself is not taken into account.

Generated Solar Energy (Direct Current Side)

When designing a PV system, the energy that is produced by the PV modules is also of interest, ie the energy flow before entry into inverter.

Grid, Electricity From

If all the energy produced by the PV system is fed into the grid, the total load requirement and the inverter’s own consumption will have to be covered by electricity drawn from the grid. If the ”Own Use” concept is selected, the energy drawn from the grid is reduced by the proportion of PV generated energy that is used to cover the load requirement.

Grid, Electricity To

If the ”Full Supply” to grid concept is selected (see Tariffs), all solar energy generated is fed into the grid and this dimension is not given. If the ”Own Use” concept is selected, only the proportion of energy that is not used by the appliances is exported to the grid.

Inverter Efficiency

The inverter efficiency is the energy generated on the alternating current side in relation to the energy fed into the direct current side.

The efficiency is made up of the Inverter Characteristic Curve, the MPP adjustment efficiencies (see Inverter Database) and the inverter’s own consumption.

A very poor inverter efficiency (in comparison to maximum efficiency) is above all possible if the inverter is oversized or because its maximum nominal output limits the PV power output.

Irradiation onto Tilted Array Surface

The irradiation onto the tilted Array surface is the energy (after subtraction of shade) on the PV surface that is available for conversion. A proportion of this energy is lost through reflection on the module's surface.

Module Temperature

There are two different Temperature Models in the program. Module temperature definition is dependent on the climate data, module specific parameters and the type of mount. The module temperature for each array is given on each array worksheet.

Own Consumption - PV System

The PV system's own consumption comes from the energy used by the inverter, when no PV energy is being produced. During the day, the inverter draws on the grid for its stand-by consumption. At night, if the inverter is not switched off completely, it also draws energy for night consumption. Both dimensions are entered in the characteristics for the Inverter.

Performance Ratio

The performance ratio is a measurement of the energy losses within the system that occur in comparison with the system's nominal output. The nominal output is calculated from the irradiation onto the tilted PV surface multiplied by the module efficiency under standard test conditions (25 C, 1000W/m²).

PV Array/Sub-Array

System › Technical Data › PV Array/ Array i

A PV array/sub-array is a PV surface unit made up of the same types of module mounted together and set at the same angle and orientation. If you have a number of inverters connected to an array, these also have to be all the same type.

PV Array – Direct Energy Use

Direct energy use means the energy that flows direct (without being stored before use) to the appliances. With alternating current appliances, however, the energy will have to be converted to AC by the stand-alone system inverter, before it can be used to cover electricity consumption.

PV Array – Energy Surplus

An energy surplus occurs if the solar energy available is not required by the appliances and the battery is charged.

PV Array – Generated Energy

The generated energy is the energy exiting the PV generator. Losses through MPP tracking are not accounted for. These dimensions also include any PV array surplus that may occur.

PV Array - Irradiation

The irradiation onto the tilted PV array surface is the solar energy that remains available after subtraction of shade. A proportion of this energy is lost through module surface reflection.

PV Array - Efficiency

The PV efficiency is the DC energy produced in relation to the total energy irradiated onto the array surface. Here the inverter's efficiency and the cabling losses are not taken into account, as they are during the system efficiency calculation.

The array efficiency takes the following into account:

- the reflection losses at the module surface,
- the PV module's efficiency, ie the characteristic curve for the PV module and the temperature coefficient for PV output (see PV Module database), and

- the array's Additional Losses.

PV Array - Radiation

The program uses a radiation processor to convert horizontal radiation into radiation onto the tilted surface using the following dimensions: the degree of latitude, the angle of inclination, the azimuth and the albedo.

Radiation Minus Reflection

Part of the radiation onto the PV surface is lost due to reflection losses on the module surface. The direct radiation is reduced by the module incident angle modifier (see also: PV Module)

Radiation onto the Horizontal

The horizontal radiation is taken from the Climate Data Files.

Radiation Without Shade

If the array is shaded for a period, the radiation that would fall onto the tilted PV surface if the surface was not shaded is identified.

Solar Coverage Proportion (Grid Connected)

The proportion of solar coverage is the generated energy (after subtraction of the inverter's own consumption) in relation to the load requirement. It is only of interest for the "Own Use" concept (see Tariffs) and is only given if an electrical appliance is defined. The solar coverage proportion does not express how much of the generated energy can be used in direct load coverage.

Solar Coverage Proportion (Stand-Alone)

The proportion of solar coverage is the relationship of the consumption covered by solar energy and the energy requirement. The consumption covered by solar energy comes from direct energy use and the solar portion of the battery charge.

Specific Annual Yield

The specific annual yield is an evaluation dimension that gives the system's annual yield standardised to the installed output. In other words, the specific annual yield corresponds to the system's peak load operating hours.

Another well known evaluation dimension is calculated from the specific annual yield: the final yield. The final yield is the specific annual yield divided by 365 days.

System Efficiency

The system efficiency is the quotient from the usable solar energy from the PV system and the total energy irradiated onto the generator surface. It is made up of the PV array efficiency, the inverter efficiency and the cabling losses.

Wind Speed at a Height of 10m

The wind speed is accounted for when defining the module temperature in the dynamic Temperature model. In the climate data files provided the wind speed is measured at a height of 10 metres.

18 Index

A

Activation Key Code....8
Annual Energy Balance.... 75
Appliances....90
Array 106
Assessment Period.... 65
Azimuth.... 56

B

Back-up Generator 43, 72
Basic Parameters 65, 71
Battery 42, 89

C

Calculation Basis 62
Calculation Model 57
Calculations....23, 61
Characteristic Curve 88
Charge Controller....42
climate data file 27
Components 18, 22
Conditions 27, 38
Consumption Costs 67
Coordinates Table 59
Copy 2D object.... 45

D

Database22, 86, 88, 89, 90, 91, 92, 93, 100, 101
Define Output Losses 65
Definitions.... 104
Degradation.... 65
Degradiation.... 62
Delete 2D object.... 45
Depreciation 68
Detailed Project Report.... 79
Discount Economic Efficiency.... 67
Discounts 36
Discounts/Supplements....38

E

Economic Efficiency
Calculation....62
Stand-Alone Systems.... 71
Economic Efficiency
Results....73
Economic Efficiency
Grid Connected Systems.... 92
Exit 26

F

File.... 26
File Types 95
Financing 72
Formatting of Graphs 76
Formatting the X-Axis.... 76
Formatting the Y-Axis.... 76
From Grid Tariff..... 34, 35, 36, 38, 91

G

Graphics 69, 75
Graphics in Table Format....77
Graphics Screen 75, 76, 77
Grid Connected Systems 25
Grid Electricity Costs.... 78

H

Heavy Load Periods....37
Help 103

I

Individual Appliances
Appliances.... 91
Info 103
Interest on Capital 65
Internet Service 103
Inverter 88
Inverter Grid Connected Systems.... 86
Inverter Stand-Alone Systems 88
Inverters.... 45
Investment Costs 66

K

Kilowatt-Hour Rate.... 34

L

Language 102
Licenses, number of.... 9
Load.... 22
Load Profile 90
Load Profiles 28

Load Utilisation Period Discount by Table35
loan Economic Efficiency 67
Loans 93
location 27
Losses 57

M

Main Screen 20
Menu 24, 102, 103
Message 101
Messages 97
MeteoSyn 27
Modules 56, 57
Monitoring System 100
MPP Tracker 89

N

New Project 24
New Sketch 59
Number 45

O

One-off Payments 66
Open 26
Operating Costs 67
Operating Instructions 20
Options 95
Orientation 56
Other Costs 67
Other Proceeds/Savings 73
Output 80, 82

P

Parameters 71
Part Load Operation 85
Paths 95
Payment Received for Grid Supply 78
Payment Sequences 73
Photo Plan 55
Pollutant Emissions 79
Pollutant Mix 27
Pollutants 93
Power Loss 62
Power Measurement 35, 37
Print 80
Printing Graphics 75, 77
Proceeds 73
program ID 8
Project Administration 26
Project Report 79, 81
Projects 22
Projekt 19
PV Array Grid Connected 43
PV Array Stand-Alone 41
PV Costs 71
PV Module 85

Q

Quick Design 25, 61

R

Reduction in Module Power 62
Registration 103
Report 70
Results 69, 75, 78, 79
Results Overview 73
Rotating Net Yield 65

S

Sales Tax 65
Save 22, 26
Savings 73
Screen 75
serial number 8
Service Period 65
Shade 59
Shade Object 59
Simulation 23, 61
Speed Buttons 77
Stand-Alone Inverter 42
Stand-Alone Systems 25, 71, 72
Sub-Array 106
Subsidies 67
Summary Project Report 81
Supplements 38
System Check 97
System Diagram 58
System Operation Start Date 62
System Requirements 8

T

Table 82
Tables 70
Economic Efficiency Programme 70
Tariff Time Periods 38
Tariffs 38

Tax 68
Technical Data 41, 42, 43, 58, 106
Technical Data Stand-Alone 41
Technical Date 42
To Grid Credit 78
To Grid Tariff 78, 92
Type of Mount 57

V

Variant Comparison 82
View Page Layout 80

W

Weather Files 27

Y

Yield 65